

Handling Instructions for Bearings



NSK Handling Instructions for Bearings

For Proper Handling of Rolling Bearings

		Contents
1	Pre	Page cautions for Proper Handling of Rolling Bearings ·· 1
2	Μοι	unting1
	2.1	Fits with Shafts · · · · · 1
		2.1.1 Fits and Clearances······1
		2.1.2 Press Fitting Force and Heating Temperature for Tight Fitting
		2.1.3 Fitting Work
		2.1.4 Mounting Bearings with Tapered Bores · · · · · · · · · · · · · 7
	2.2	Mounting in a Housing7
	2.3	Mounting with Preload Applications9
		2.3.1 Preload for Radial Bearings · · · · · · · · 9
		2.3.2 Preload for Thrust Bearings · · · · · · · · · · · · · · · · · · ·
	2.4	General Mounting Precautions 12
	2.5	Lubrication · · · · · · 13
	2.6	Test Operation 14
3	Mai	ntenance and Inspection
	3.1	Procedures of Maintenance and Inspection16
	3.2	Lubrication Method 16
		3.2.1 Grease Lubrication · · · · · · · 16
		3.2.2 Oil Lubrication · · · · · · · 17
	3.3	Bearing Failure · · · · · 18
4	Disi	nounting
		Dismounting Outer Rings
	4.2	Dismounting Inner Rings 22
	4.3	Bearing Cleaning
	4.4	Bearing Inspection ······24
5	Bea	ring Storage 24
6	Арр	endices

Table 1 Fits of Radial Bearings with Shafts

Mounting

Rolling bearings are used under various operating conditions with a wide variety of light to heavy loads. Since they are manufactured to a high level of accuracy, they must be handled carefully and properly; the purpose for which they are used is just as important as careful handling.

Incorrect mounting and improper handling are the most common causes of premature failure. Consequently, it is clear that proper handling, as well as appropriate selection and usage, are essential. Instructions for the proper handling of rolling bearings are summarized as follows:

(1) Keep bearings and related components clean.

- (2) Confirm that the dimensions and finish of related components are correct for the desired use.
- (3) Keep bearings free from harmful substances, including foreign particles and moisture.
- (4) Be sure to mount bearings in compliance with their designed purpose and specified operating conditions.
- (5) Use the proper tools for mounting and dismounting.



Fits with Shafts 2.1

2.1.1 Fits and Clearances

Standard bearings with cylindrical bores are often mounted by providing interference fit to the corresponding shafts. At the same time, significant force is required to press-fit the inner ring on the shaft. A certain degree of interference fit has been provided for mounting, as the inner ring may expand somewhat, generally reducing the amount of clearance in proportion to the expansion of the inner ring. Although clearance for tapered roller bearings is adjustable after they are mounted, clearance adjustments cannot be made for ball bearings and cylindrical roller bearings. Therefore, bearings with sufficient clearance must be selected according to the level of interference. Bearings are generally manufactured based on a CN clearance suited for normal load conditions. To the extent that an interference fit is larger than the CN clearance, bearings with a larger

(6) Exercise care to not damage or distort bearings in the course of mounting and dismounting.

- (7) Use the correct quantities of the appropriate lubricant.
- (8) Keep hands as clean as possible when handling bearings to prevent corrosion. Wearing gloves, if possible, is recommended.

Although sophisticated devices are not necessarily required for handling bearings, proper tools should be used depending on specific circumstances to facilitate work operations and ensure flawless performance. Obviously, engineers who engage in design and inspection must also be well versed in the proper handling and mounting methods in conformity with the intended use of the bearings.

The goals of proper handling are to protect the bearings from any potential damage and ensure they serve their intended uses as effectively as possible.

clearance (C3, C4, etc.) must be selected. In general, the decrease in clearance resulting from the fitting between the inner ring and the shaft may be expressed by the following equations (1) and (2):

For machined shafts:

For ground shafts;

$$\delta_f = k \cdot \Delta d = k \frac{d}{d+2} \Delta d_a \cdots \cdots \cdots \cdots \cdots (2)$$

Where

- δ_f : Decrease in clearance due to fitting (mm)
- Δd : Effective interference (mm)
- $\Delta d_{\rm a}$: Apparent interference for measurement (mm)
- $k: d/D_i \doteq 0.70 \text{ to } 0.90$
- d: Bearing nominal bore diameter (mm)
- D_i : Raceway diameter of inner ring (mm)

Fits of Radial Bearings with Shafts

Load Conditions				Shaft Diameter (mi	m)		Remarks	
		Examples	Ball Bearings	Cylindrical Roller Bearings Tapered Roller Bearings	Spherical Roller Bearings	Tolerance of Shaft		
		Ra	dial Bearings w	vith Cylindrical E	Bores			
Rotating	Easy axial displacement of inner ring on shaft desirable	Wheels on stationary axles	All shaft diameters			g6	Use g5 and h5 where accuracy is required. In case of large	
Outer Ring Load	Easy axial displacement of inner ring on shaft unnecessary	Tension pulleys, rope sheaves				h6	bearings, f6 can be used to allow easy axial movement.	
		Electrical home	≤ 18	_		js5	Use class 5 and high precision bearings	
	Light loads or variable loads	appliances, pumps, blowers,	18 to 100	≤ 40	_	js6 (j6)	where accuracy is required. For high	
	(≤ 0.06 <i>C</i> _r (¹))	transport vehicles, precision machinery,	100 to 200	40 to 140		k6	precision ball bearings with bore	
		machine tools	_	140 to 200		m6	diameter shorter than 18 mm, use h5.	
	Normal loads (0.06 to 0.13 C _r (¹))		≤ 18	—	_	js5 to 6 (j5 to 6)		
Rotating Inner Ring		numps engine	18 to 100	≤ 40	≤ 40	k5 to 6	k6 and m6 can be used for single-row tapered roller bearings and single- row angular contact ball bearings instead of k5 and m5	
Load or			100 to 140	40 to 100	40 to 65	m5 to 6		
Direction of Load			140 to 200	100 to 140	65 to 100	m6		
Indeteminate			200 to 280	140 to 200	100 to 140	n6		
			—	200 to 400	140 to 280	p6		
			—		280 to 500	r6		
			—	—	> 500	r7		
		Railway axleboxes,	—	50 to 140	50 to 100	n6		
	Heavy loads or shock loads	industrial vehicles, traction motors,	—	140 to 200	100 to 140	p6	More than CN bearing	
	(> 0.13 C _r (¹))	construction equipment,	—	> 200	140 to 200	r6	internal clearance is necessary.	
		crushers	—		200 to 500	r7		
Cen	tral axial load only	Used part of each type of bearings	All shaft diameters			js6 (j6)	_	
		Radial B	Bearings with Ta	apered Bores an	d Sleeves			
All type of loading		General bearing applications		All shaft diameters		h9/IT5 (²)	IT5 and IT7 mean that the deviation of the shaft from its true geometric form, e.g. roundness	
		Transmission All shaft diameters shafts, woodworking				h10/IT7 (²)	and cylindricity should be within the tolerances of IT5 and IT7	

			Ś	Shaft Diameter (m	m)			
Load Conditions		Examples	Ball Bearings	Cylindrical Roller Bearings Tapered Roller Bearings	Spherical Roller Bearings	Tolerance of Shaft	Remarks	
		Ra	dial Bearings w	ith Cylindrical E	Bores			
Rotating	Easy axial displacement of inner ring on shaft desirable	Wheels on stationary axles				g6	Use g5 and h5 where accuracy is required. In case of large	
uter Ring Load	Easy axial displacement of inner ring on shaft unnecessary	Tension pulleys, rope sheaves		All shaft diameters			bearings, f6 can be used to allow easy axial movement.	
		Electrical home	≤ 18			js5	Use class 5 and high precision bearings	
	Light loads or variable loads	appliances, pumps, blowers,	18 to 100	≤ 40		js6 (j6)	where accuracy is required. For high	
	(≤ 0.06 <i>C</i> _r (¹))	transport vehicles, precision machinery,	100 to 200	40 to 140		k6	precision ball bearings with bore	
		machine tools	_	140 to 200		m6	diameter shorter than 18 mm, use h5.	
			≤ 18		_	js5 to 6 (j5 to 6)	k6 and m6 can be used for single-row tapered roller bearings and single- row angular contact ball bearings instead of k5 and m5	
Rotating ner Ring	Normal loads (0.06 to 0.13 Cr (¹))	General bearing applications, medium and large motors, turbines, pumps, engine main bearings, gears, woodworking machines	18 to 100	≤ 40	≤ 40	k5 to 6		
Load or			100 to 140	40 to 100	40 to 65	m5 to 6		
rection of Load			140 to 200	100 to 140	65 to 100	m6		
eteminate			200 to 280	140 to 200	100 to 140	n6		
			—	200 to 400	140 to 280	p6		
			—		280 to 500	r6		
			—		> 500	r7		
		Railway axleboxes,	—	50 to 140	50 to 100	n6		
	Heavy loads or shock loads	industrial vehicles, traction motors,	—	140 to 200	100 to 140	p6	More than CN bearing internal clearance is	
	(> 0.13 <i>C</i> _r (¹))	construction equipment,	—	> 200	140 to 200	r6	necessary.	
		crushers			200 to 500	r7		
Central axial load only Used part of each type of bearings			,	All shaft diameters		js6 (j6)	—	
		Radial E	Bearings with Ta	apered Bores ar	d Sleeves			
All type of loading		General bearing applications	General bearing applications		h9/IT5 (²)	IT5 and IT7 mean that the deviation of the shaft from its true geometric form, e.g. roundness		
		Transmission shafts, woodworking spindles	All shaft diameters			h10/IT7 (²)	and cylindricity should be within the tolerances of IT5 and IT7, respectively.	

Note (1) C_r represents the basic load rating of the bearing. ⁽²⁾ Refer to Appendix Table 3 (page 29) for values of IT. Remarks This table is applicable only to solid steel shafts.

Fits of Thrust Bearings with Shafts

Lc	bad Conditions	Examples	Sha
Cen	tral axial load only	Main shafts of lathes	All s
Combined	Stationary inner ring load	Cone crushers	All s
radial and axial loads (Spherical thrust roller bearings)	Rotating inner ring load or direction of load indeterminate	Paper pulp refiners, plastic extruders	

aft Diameter (mm)	Tolerance of Shaft	Remarks
shaft diameters	h6 or js6 (j6)	
shaft diameters	js6 (j6)	
≤ 200	k6	
200 to 400	m6	
> 400	n6	



Table 2 Fits of Bearings with Housings

Fits of Radial Bearings with Housings

	Load Co	nditions	Examples	Tolerances for Housing bores	Axial Displacement of Outer Ring	Remarks												
		Heavy loads on bearing in thin-walled housing or heavy shock loads	Automotive wheel hubs (roller bearings) Crane travelling wheels	P7														
Solid Housings	Rotating outer ring load	Normal or heavy loads	Automotive wheel hubs (ball bearings) Vibrating screens	N7														
	ioau	Light or variable loads	Conveyor rollers Rope sheaves Tension pulleys	M7	Impossible	—												
		Heavy shock loads	Traction motors															
	Direction of load indeterminate	Normal or heavy loads	Pumps	K7	Generally impossible	If axial displacement of the outer ring is not required.												
Solid or Split		Normal or light loads	Crankshaft main bearings Medium and large mortors	JS7 (J7)	Possible	Axial displacement of outer ring is necessary.												
Housings	Rotating inner ring load	Loads of all kinds	General bearing applications Railway axleboxes	H7														
				_				_	_				_	Normal or light loads	Plummer blocks	H8	Possible	—
		High temperature rise of inner ring through shaft	Paper dryers	G7														
		Accurate running	Grinding spindle real ball bearings Grinding centrifugal compressor free bearings	JS6 (J6)	Possible	_												
Solid Housings	Direction of load indeterminate	desirable under normal or light loads	Grinding spindle front ball bearings Grinding centrifugal compressor fixed bearings	K6	Generally fixed	For heavy loads, interference fit tighter than K is used. When high accuracy is required, very												
	Rotating inner ring load	Accurate running and high rigidity desirable under variable loads	Cylindrical roller bearings for machine tool main spindle	M6 or N6	Fixed	strict tolerances should be used for fitting.												
		Minimum noise is required	Electrical home appliances	H6	Easily possible	_												

Remarks 1. This table is applicable to cast iron and steel housings. For housings made of light alloys, the interference should be tighter than those in this table.

2. Refer to NSK catalogs for special fittings such as drawn cup needle.

Fits of Thrust Bearings with Housings

Load Conditions		Bearing Types	Tolerances for Housing Bores	Remarks
		Thrust Ball Bearings	Clearance ≥ 0.25 mm	For general applications
		must ball beamigs	H8	When precision is required
			Outer ring has radial clearance	When radial loads are sustained by other bearings
Combined	Stationary outer ring loads		H7 or JS7 (J7)	_
radial and axial loads	Detetion extension leads on	Spherical Thrust Roller Bearings	K7	Normal loads
	Rotating outer ring loads or direction of load indeterminate	-	M7	Relatively heavy radial loads

Therefore, 70 % to 90 % of the interference appears as reduction in clearance. (Smaller reduction in clearance is adopted for bearings of diameter series 4.) Moreover, the difference in operating temperature between inner and outer rings ranges from 5 $^{\circ}$ C to 10 $^{\circ}$ C. However, this temperature difference will exceed that range if the inner ring's temperature rises or the outer ring is cooled.

Reduction in clearance due to temperature difference between inner and outer rings:

- $\delta_{t} \doteq \alpha \cdot \Delta_{t} \cdot D_{e} \cdots \cdots \cdots \cdots (3)$ Where
 - δ_t : Reduction in radial clearance due to temperature difference between inner and outer rings (mm)

 - Δ_t : Temperature difference between inner and outer rings (°C)
 - De: Outer ring raceway diameter (mm)

Rolling Bearing
$$\Rightarrow \frac{1}{4}(3D+d)$$

Ball Bearing
$$\Rightarrow \frac{1}{5}(4D+d)$$

- d: Nominal bearing bore diameter (mm)
- D: Nominal bearing outside diameter (mm)

Tables 1 and 2 provide examples of how the degree of these fits is determined based on load and temperature conditions, etc. Bearings with C3 or C4 clearance (larger than CN clearance) must be used depending on the degree of fit and temperature conditions.

2.1.2 Press Fitting Force and Heating Temperature for Tight Fitting

When attaching the inner ring firmly to the shaft, the force to press-fit an inner ring in the axial direction varies depending on interference and shaft diameter. However, the required force rises as surface pressure on the fitted surface and friction coefficient increase. When a stronger press fitting force is required, the inner ring is usually expanded by heating in oil before mounting, but in some cases, the ring is press-fitted using a press or similar tool while measuring the degree of interference as measured in the press fitting force.

The surface pressure $p_{\rm m}$, and press fitting force or withdrawal force of the fitted surface, which are applied to a solid shaft, can be expressed by the following equations (4) and (5):

$$p_{\rm m} = \frac{1-k^2}{2} \cdot \frac{\Delta d}{d} \cdot E \cdots \cdots \cdots (4)$$

$$K = \mu p_{\rm m} \pi \ d \ B$$

$$= \frac{1}{2} \mu E \pi \ B (1-k^2) \Delta d \cdots \cdots \cdots (5)$$

Example of application	μ value (average)
Press-fitting inner ring to cylindrical shaft	0.12
Withdrawing inner ring from cylindrical shaft	0.18
Press-fitting inner ring to tapered shaft or sleeve	0.165
Withdrawing inner ring from tapered shaft	0.135
Press-fitting sleeve onto the area between shaft and bearing's tapered hole	0.30
Withdrawing sleeve from the area between shaft and bearing's tapered hole	0.33

Table 3 Values of μ

Where

 $k: d/D_i$

d: Nominal bearing bore diameter (mm)

- D_i : Raceway diameter of inner ring (mm)
- *B* : Nominal inner ring width (mm)
- Δd : Effective interference (mm)
- E : Modulus of longitudinal elasticity = 208 000 MPa
- μ : Friction coefficient of the fitted surface

Friction on the fitted surface differs substantially depending on the fitted-surface conditions. In general, the values listed in the **Table 3** can apply to the values of μ . Also, the value of $(1-k^2)$ with respect to each ratio D/d of outside diameter to bore diameter of a bearing can be approximately expressed as shown in Table 4. This is how to calculate the press fitting force to press an inner ring onto the shaft. In many cases, however, it is easier to mount the inner ring in place after heating it in oil to expand it. Although the applicable temperatures vary according to interference and shaft diameter, it is recommended to heat the bearing at 120 °C or lower whenever possible since the hardness of the bearing will decrease when heated to 150 °C or higher. Fig. 1 shows the heating temperature and bearing bore diameter expansion with respect to shaft diameter, in which the required heating temperature differences can be found, since it also shows the maximum interference of various fits. The bearing cannot be easily mounted to the shaft during the shrink fitting process since the inner ring will cool a little during mounting. Therefore, heat the bearing

D/d	$(1-k^2)$
1.5	0.25
2.0	0.41
2.5	0.52
3.0	0.61
3.5	0.67

Table 4 Values of $(1-k^2)$

D: Nominal outside diameter, d: Nominal bore diameter





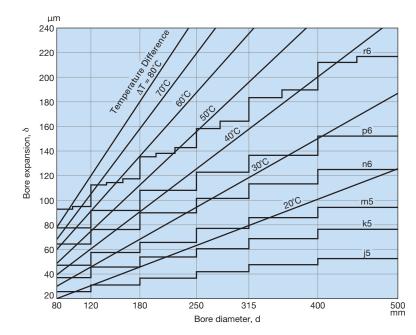


Fig. 1 Temperature and Thermal Expansion of Inner Ring

to a temperature of 20 °C to 30 °C higher than the lowest temperature required for mounting without interference. The recommended amount of time for immersing the bearing in heated oil is approximately 20 minutes. For example, if a bearing with a bore diameter of 120 mm is mounted with an interference fit of n6, the maximum interference fit is 65 um. In this case, the required temperature for heating the bearing would be 50 °C above ambient temperature as shown in Fig. 1. From that point on the heat scale, the temperature would then need to be raised an additional 20 °C to 30 °C in order to easily press fit the bearing onto the shaft. Consequently, the overall required heating temperature would be an additional 70 °C to 80 °C above ambient temperatures. Press fitting force and shrink fit for tight fitting have already been briefly discussed. However, excessive interference can sometimes produce abnormally large stress in the inner ring, which may cause the inner ring to crack or be otherwise damaged. Of the stress produced in the inner ring, the circumferential stress on the fitted surface in its inner diameter is the largest, and its magnitude can be expressed by equation (6) as shown below.

 $\sigma_{\rm tmax} = p_{\rm m} \, \frac{1 + k^2}{1 - k^2} \quad \cdots \qquad (6) \label{eq:stars}$ where,

 $p_{\rm m}$: Surface pressure (MPa) k: d/D_i

As a general rule, it is desirable to choose a fit for which the maximum stress value may be set to 98 MPa or less for bearing steel or, in the worst case, to 127 MPa or less.

2.1.3 Fitting Work

The inner ring is usually mounted on a shaft by means of press fitting or shrink fitting. Press fitting, however, requires a large force. The required force for press fitting can be determined by the aforementioned equation (5). During press fitting work, brinelling indentations may be caused on the raceway surfaces by rolling elements (balls or rollers) if force is applied to the outer ring. Furthermore, direct shock applied to the small ribs of the inner ring may cause the ring to crack. At the same time, no force should be applied to the cage. Therefore, exercise considerable care when performing press fitting work. Since only a small press fitting force is required for medium- or small-sized bearings with a smaller interference, the inner ring can be pressed onto the shaft corresponding to the bearings at room temperature. As shown in Fig. 2, tap the brass bar on the lateral face of the inner ring, then hammer it to press-fit the ring onto the shaft. At this point, the tip of the brass bar, which has been cut crosswise in advance, comes into contact with the inner ring's lateral face, so that the outside face of the ring's lateral face will not be struck and the ring will be brought into firm, proper contact with the shaft shoulder. Take care not to allow brass chips to enter the bearings. A more effective method involves using a tubular fitting tool (Fig. 3) made of mild steel that contacts the entire side face of inner ring. Using this tool, press fitting can be done while exerting a heavy but non-damaging impact on the ring.

Using a press, compressed air, or hydraulic pressure, facilitates parallel push-in and enables grasping press-fit pressure for proper mounting. Consequently, these tools are useful since the interference can be checked to see if it is too tight or too loose.

Before conducting press fitting work, a high-viscosity oil, preferably an extreme-pressure lubricant, must be applied to the inner surface of the inner ring and the outer surface of the shaft. Also note that applying a lubricant made of molybdenum disulfide (MoS₂), in a paste form, to the areas for press fitting work prevents scoring and facilitates easier dismounting because it

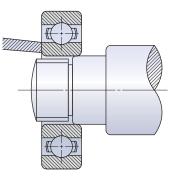
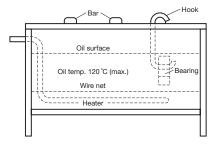


Fig. 2 Mounting of Bearing

prevents the bearing from adhering to the fitted surface during dismounting.

Shrink fitting is recommended as an easy mounting method for bearings with tighter interference. Heating temperature can be determined from Fig. 1 according to the specific bearing dimension and the intended interference. A high-quality mineral oil should be used for the heating oil.

The oil bath should be large enough to accommodate two to five bearings, with a sufficient amount of oil to completely cover the bearings. Precautions for use of the oil bath are shown in Fig. 4. Be sure to use a wire net or equivalent device in the bath to support the bearings in the oil without allowing them to directly contact either the heater or the bottom of the bath. For easy handling, place a long bar across the top of the oil bath with an attached hook from which to suspend the bearings. When tight-fitting inner rings are used for cylindrical roller bearings for rolling mills, as well as for axle bearings for railway rolling stock, a stronger press fitting force and withdrawal force are required for mounting and dismounting. For this reason, the bearings or shafts may be damaged due to operating difficulties under normal working conditions. For cylindrical roller bearings whose inner rings are not provided with ribs, it is recommended to use induction current to heat and expand the inner rings for mounting and dismounting to speed up the operation. Using this mechanism, NSK has devised a heating-type mounting/dismounting device that can be powered by an AC factory power supply with commercial frequency, and markets it for various industrial fields. Moreover, NSK has also made commercially available a bearing heater, as shown in Fig. 5, for heating a single unit, such as a small bearing.



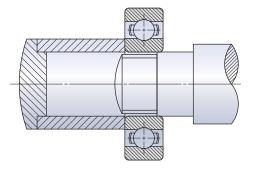


Fig. 3 Mounting of Bearing

A bearing attached to a shaft cools rapidly, and after heating, an expanded bearing shrinks in a crosswise direction. In some cases, therefore, in order to avoid a clearance between the inner ring and shoulder, press the bearings firmly against the shoulder by means of a shaft nut or other appropriate tool.

After mounting a bearing in place, cool it and apply lubricant to its inner and outer surfaces. At that point, make sure the bearing is free of any dirt.

Except when preload is applied to a bearing, a clearance is usually needed for the bearing after mounting; therefore, confirm that the bearing rotates smoothly. For roller bearings, clearance can be measured using a clearance gauge.

Since the inner ring can be separated from the outer ring in cylindrical roller bearings, the outer ring must be removed when mounting the inner ring. Avoid applying undue force in the later stage at which the outer ring is fit to the inner ring, which is attached to the shaft, since the rollers and raceway may be easily damaged. This kind of damage should be avoided because it may result in noise and premature failure. Also, roller bearings must be compatible. Consequently, confirm compatability in advance, and take special care to avoid mistakenly collating incompatible types in combinations.

Although there is no problem with a mounting in which there is a loose fit with the shaft, clearance between the shaft and the inner ring must be minimal.

Usually, the fit between the inner ring and shaft of a thrust bearing should be about js6 (j6). Some clearance is usually provided, except for machine tools, which require a higher degree of accuracy.



Fig. 5 Heating by bearing heater



2.1.4 Mounting Bearings with **Tapered Bores**

Bearings with tapered bores are mounted in place using adapter sleeves or withdrawal sleeves, or directly on tapered shafts. The degree of fit is determined by reduction in clearance and push-in amount of the sleeves (or bearings).

For spherical roller bearings, a decrease in clearance during mounting is usually measured by a clearance gauge. The reduction in the clearance and residual clearance after mounting are shown in Table 5. Spherical roller bearings with tapered bores have generally been manufactured taking into account the reduction in clearance as shown in Table 5. When a very large load will be applied, increase the reduction in clearance by about 20 % more than the corresponding listing in Table 5.

In some cases, the push-in amount (axial movement) of the inner ring or withdrawal sleeve is measured instead of directly measuring the reduction in clearance. However, since it is difficult to determine the initial measurement position, it is safer to directly measure the reduction in clearance.

When a clearance gauge cannot be used for small roller bearings because of the small clearance after mounting them in position, the amount of axial movement must be measured instead of the reduction in clearance. Also, in cases where a large bearing is mounted in such a way that the bearing is heated in oil to expand it to ease mounting, axial movement must also be measured. In this case, the bearing should be initially mounted on the shaft before it is heated and this initial position measured, then the final mounting position can be determined by the amount of axial movement from the initial mounting position after the bearing has been heated. At this stage, the intended reduction in clearance must be confirmed by measuring the initial clearance prior to heating and the final clearance after cooling.

2.2 Mounting in a Housing

Bearings are usually mounted in housings after they have been attached to a shaft. Mounting methods and precautions vary depending on such factors as housing design, fit, and the configuration of horizontal and vertical shafts. The general information discussed in this section should apply to all applications. The fit between the housing and the outer ring is determined based on load conditions, surface roughness, material hardness, etc. However, if the actual fit is tighter than specified, modifications must be manually performed through operations such as grinding. When the only method for enlarging a housing is to use a scraper, exercise care to avoid deforming the bearing seat into an oval shape or slope. For a split housing, avoid inserting a thin shim between the upper and lower parts to loosen the fit. In fact, when

the fit is too loose, the insertion of a sheet of paper or metal foil into the area between the housing and the outer ring must be avoided by all means. Only when absolutely necessary, the housing may be modified by plating its inner planes or inserting a bushing so that the housing dimensions can be corrected to meet the specified requirements.

When mounting a housing, do not allow labyrinth seals and other components to rub against each other. Take measures to avoid applying excessive load or eccentric load to the bearing, which may result from improper mounting on the base or defective joints.

Select only one of the bearings to be laid to serve as the fixed-end bearing for fixing and maintaining the mounted bearings in the exact position in an axial direction. For the fixed-end bearing, choose a type of bearing that can bear both radial and axial loads.

Bearings other than the fixed-end bearing should function as free-end bearings on which only radial load can be applied, to relieve expansion and contraction of the shaft due to temperature change. They should also be used to adjust the mounting position in the axial direction. Unless adequate measures are taken to prevent shaft shrinkage due to temperature changes, abnormal axial load will be applied on the bearings, resulting in premature failure.

Cylindrical roller bearings (NU or N type), in which the inner ring can be separated from the outer ring and which can also move in the axial direction, are suitable for free-end bearings. The use of these types of bearings often increases the ease of mounting and dismounting procedures.


If non-separable bearings are used as free-end bearings, the outer ring and housing should have a loose fit to allow for shaft expansion during operation and to allow for the expansion of the bearings. This can sometimes be accommodated away from the fitted surface between the inner ring and the shaft.

If the distance between bearings is short and shaft shrinkage has less effect on the bearings, use angular contact ball bearings and tapered roller bearings or other types of bearings which can handle the application of axial load in only one direction, and mount them face-toface or back-to-back to form a duplex set. The axial clearance (movement in axial direction) after mounting should be adjusted with a nut or a shim. When mounting an outer ring with a tighter fit, use a tubular attachment tool made of mild steel as shown in Fig. 7. Should either the outer or inner rings be mounted with a tight fit and either the inner ring is already mounted on the shaft or the outer ring is already attached to a bearing housing, use tools such as shown in Figs. 8 and 9 to avoid the possible impact of press fitting on a bearing ring through the rolling elements. Furthermore, be sure to use an appropriate method to avoid applying impact load on a bearing when mounting a joint, for example, after having mounted the bearing on a shaft with its housing.


Table 5 Mounting Spherical Roller Bearings with Tapered Bores


Bearing Bore Diameter Reduction in Radial Clearance			Axial Movement				Minimum Permissible Residual Clearance		
over	a incl.	min.	max.	Taper min.	1:12 max.	Taper ⁻ min.	1:30 max.	CN	C3
30 40 50 65	40 50 65 80	0.025 0.030 0.030 0.040	0.030 0.035 0.035 0.045	0.40 0.45 0.45 0.60	0.45 0.55 0.55 0.70	 	 	0.010 0.015 0.025 0.030	0.025 0.030 0.035 0.040
80	100	0.045	0.055	0.70	0.85	1.75	2.15	0.035	0.050
100	120	0.050	0.060	0.75	0.90	1.9	2.25	0.045	0.065
120	140	0.060	0.070	0.90	1.1	2.25	2.75	0.055	0.080
140	160	0.065	0.080	1.0	1.3	2.5	3.25	0.060	0.100
160	180	0.070	0.090	1.1	1.4	2.75	3.5	0.070	0.110
180	200	0.080	0.100	1.3	1.6	3.25	4.0	0.070	0.110
200	225	0.090	0.110	1.4	1.7	3.5	4.25	0.080	0.130
225	250	0.100	0.120	1.6	1.9	4.0	4.75	0.090	0.140
250	280	0.110	0.140	1.7	2.2	4.25	5.5	0.100	0.150
280	315	0.120	0.150	1.9	2.4	4.75	6.0	0.110	0.160
315	355	0.140	0.170	2.2	2.7	5.5	6.75	0.120	0.180
355	400	0.150	0.190	2.4	3.0	6.0	7.5	0.130	0.200
400	450	0.170	0.210	2.7	3.3	6.75	8.25	0.140	0.220
450	500	0.190	0.240	3.0	3.7	7.5	9.25	0.160	0.240
500	560	0.210	0.270	3.4	4.3	8.5	11.0	0.170	0.270
560	630	0.230	0.300	3.7	4.8	9.25	12.0	0.200	0.310
630	710	0.260	0.330	4.2	5.3	10.5	13.0	0.220	0.330
710	800	0.280	0.370	4.5	5.9	11.5	15.0	0.240	0.390
800	900	0.310	0.410	5.0	6.6	12.5	16.5	0.280	0.430
900	1 000	0.340	0.460	5.5	7.4	14.0	18.5	0.310	0.470
1 000	1 120	0.370	0.500	5.9	8.0	15.0	20.0	0.360	0.530


Remarks Values for reduction in radial internal clearance are for bearings with CN clearance. For bearings with C3 Clearance, the maximum values listed should be used for the reduction in radial internal clearance.

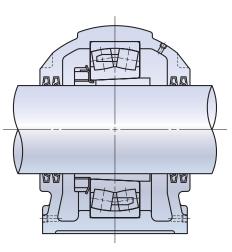

Units: mm

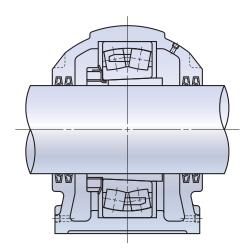






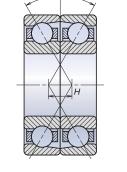


Fig. 7 Preload fitting of outer ring

Fig. 8 Preload fitting of outer ring

Fig. 9 Preload fitting of inner ring






Fig. 13 Front-to-front duplex bearings Fig. 14 Back-to-back duplex bearings

The relation between axial load and displacement in the axial direction of single-row angular contact ball bearings can be approximately expressed by equation (7) below.

$$\delta_{\mathrm{a}} = \frac{4.4 \times 10^{-4}}{\sin \alpha} \left(\frac{Q^2}{D_{\mathrm{a}}}\right)^{\frac{1}{3}} \cdots \cdots \cdots \cdots (7)$$

Where

- δ_a : Displacement in axial direction (mm)
- Q: Load applied to a single ball (N)
- α : Contact angle
- D_a : Diameter of ball (mm)

If the axial load to be applied to the entire bearing is T, then load Q, which is applied to a single ball when the number of balls of the bearings is Z, can be expressed by the following equation (8):

Therefore, deflection in axial direction, δ_a , can be generally expressed by the following equation:

$$\delta_{a} = C_{a} \cdot T^{\frac{2}{3}} \cdot \cdots \cdot \cdots \cdot \cdots \cdot \cdots \cdot \cdots \cdot \cdots \cdot (9)$$

 $C_{\rm a}$ is a constant determined by the individual type and dimension of the bearing.

In Fig. 16, clearances, a and b, between the bearings can be expressed by axial deflection (δ_a). And, as preload increases, clearances a and b will decrease, and the preload will become T_1 after the clearances reach zero. If the axial load, T, is applied externally to bearing A, A will further deflect by δ_i in the axial direction. Deflection of bearing B will also decrease by the same amount. Then the deflections of bearings A and B will become as follows:

$\delta_{aA} = \delta_a + \delta_i$, $\delta_{aB} = \delta_a - \delta_i$

To be more specific, the force, including preload, applied to bearing A is $(T_1 + T - G)$, and $(T_1 - G)$ is applied to bearing B.

2.3 Mounting with Preload Applications

2.3.1 Preload for Radial Bearings

When mounting angular contact ball bearings and tapered roller bearings, preload must be applied depending on specific usage conditions. Preload refers to the assembly adjustment in which the required load is applied in advance to the balls or rollers of a bearing while no load is applied externally (or under the conditions where rolling elements maintain their position during mounting). The purpose of preload is to minimize shaft deflection in radial or axial directions during operation within the requisite minimum allowances. Mounting with preload application is a very effective way to lessen deflection. However, under no circumstances should you ever apply a larger preload to a bearing than necessary. The amount and application method, therefore, should always be carefully observed to avoid mistakes, with due consideration for the purpose of preload.

Fig. 10 shows a situation in which two radial ball bearings' outer rings are mounted after a preload is applied to them by means of end cover screws. Although this mounting method is simple, sufficient results are not possible without careful adjustment by a skilled worker. Moreover, it is difficult to accurately measure the amount of preload using this method. Therefore, the starting frictional moment and the amount of preload of a bearing must be known in advance.

The lighter the load a bearing is required to handle during operation, the weaker the preload that would be necessary for mounting. In this connection, there is

Fig. 10 Preload application by screw


Fig. 11 Preload application by spring Fig. 12 Preload application by spacer (on free-end)

9 NSK


bearing: using a spring as shown in Fig. 11. In this preloading method, the size and compression of the spring can be determined from the amount of preload. Several springs of proper size are placed at the circumference. In many cases, preloading by means of springs is conducted to lessen radial deflection. As shown in **Fig. 12**, applying preload to a bearing with spacers inserted into both inner and outer rings is an excellent method. This method facilitates mounting and ensures the proper application of preload. One spacer is slightly longer than another, and the dimensions of individual bearings differ slightly. For this reason, since we cannot say that similar length spacers can be applied to all bearings, the specific length must be measured and determined individually when combining bearings. Single-row angular contact ball bearings are not used independently, but always in pairs. They can be combined as front-to-front duplex bearings (DF) as shown in Fig. 13, or back-to-back duplex bearings (DB) as shown in Fig. 14.


another way in which preload may be applied to a

Fig. 15 shows a situation in which no axial preload is applied, where the required deflections of inner and outer rings in the axial direction for the preload are 'a' and 'b', respectively, and preload T_1 will be obtained only after 'a' and 'b' move in an axial direction when tightened by a nut. Typically, 'a' equals 'b' for bearings of the same type. In any case, as long as 'a' and 'b' are properly designed and fabricated for the specific conditions of use, mounting can be easily carried out by simply tightening the nut firmly.









(Front-to-front duplex bearings)

Fig. 15 Amount of preload

If only δ_T deflects under axial load T when no preload is applied to a bearing, the resulting decrease in deflection of the bearing from the preload can be expressed as $(\delta_T - \delta_i).$

Also, in the case of $G = T_1$ or $\delta_1 = \delta_a$, bearing B is under no-load conditions, and the deflection of bearing A, δ_{aA} , becomes as follows:

$$\delta_{aA} = 2\delta_a = 2C_a \cdot T_1^{\frac{2}{3}} = C_a (2^{\frac{3}{2}} T_1)^{\frac{2}{3}} \cdot \cdot \cdot (10)$$

Moreover, the force applied to bearing A is equal to $G=T_1$, the following equation holds:

 $T_1 + (T - G) = G + (T - G) = T \cdot \dots \cdot (11)$

Then, from the equations, (9), (10) and (11), the following equation holds:

$$\delta_{aA} = C_a \cdot T^{\frac{2}{3}} = C_a (2^{\frac{3}{2}} T_1)^{\frac{2}{3}} \cdots \cdots \cdots \cdots (12)$$

That is.

 $T = 2\sqrt{2} \cdot T_1$

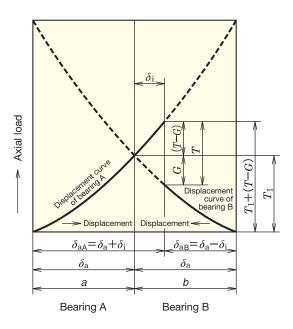


Fig. 16 Axial displacement with preload



When preload is provided, bearing A needs a load capacity that withstands axial load $(T_1 + T - G)$ relative to the required life and speed conditions.

2.3.2 Preload for Thrust Bearings

Care should be taken not to allow balls or bearing rings of bearings to get out of position when the thrust ball bearings are mounted on horizontal shafts. This is especially important for double-direction thrust ball bearings or two single-direction thrust ball bearings on horizontal shafts.

In other words, if the balls on the side where no load is applied, and cages and/or bearing rings are displaced downward or off center, and load is applied to the row of bearings, damage or failure caused by heat generation will inevitably occur. For this reason, preload in the axial direction is required as a preventive measure. This misalignment of the balls and cages or bearing rings causes an uneven application of load on the balls, which leads to slippage in their motion to return to the home position, which in turn results in heat generation and damage.

As in the case of radial bearings, the preloading method can be applied by a screw or adjustment plate by which axial adjustment is made, or by a spring. **Figs. 17** and **18** show some examples of these applications. However, as the former method requires difficult adjustment and requires experience, the latter method, using a spring, is easier and may provide better results. This preloading method can apply not only to thrust ball bearings, but also to thrust roller bearings, as shown in **Fig. 19**. When the balls in thrust ball bearings rotate at relatively high speeds, sliding due to gyroscopic moments on the balls may occur. The larger of the two values obtained from equations (13) and (14) below should be adopted as the minimum axial load in order to prevent such sliding.

Where

 $F_{a \min}$: Minimum axial load (N) C_{0a} : Basic static load rating (N) n: Speed (min⁻¹) N_{max} : Limiting speed (oil lubrication) (min⁻¹)

When spherical thrust roller bearings are used, damage such as scoring may occur due to sliding between the rollers and outer ring raceway while in use. The minimum axial load $F_{\rm a\,min}$ necessary to prevent such sliding is obtained from the following equation:



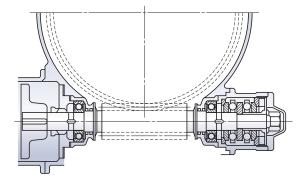


Fig. 17 Preload of thrust ball bearings (by screw)

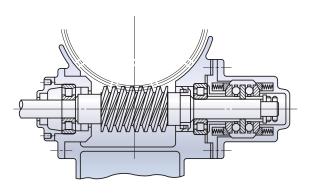


Fig. 18 Preload of thrust ball bearings (by spring)

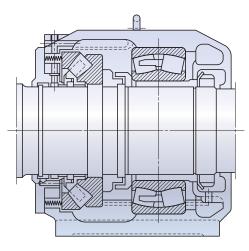


Fig. 19 Preload of thrust roller bearings (by spring)

2.4 General Mounting Precautions

To fix a radial bearing to a shaft, generally bring the bearing into close contact with the shaft shoulders and spacer and fix it in position by tightening the shaft nut. The ends of the shaft shoulders and the spacer must be perpendicular to the shaft center line. If the components are not perpendicular, bearing rotation accuracy and roller contact performance will be adversely affected, resulting in heat generation and premature fatigue. The same care must be taken to ensure the proper contact between the housing shoulders and the lateral face of the outer rings. Since shaft shoulder height and the outer diameters of spacers or the housing shoulder height are closely related to the dismounting of bearings, their standard dimensions are described in the JIS as well as in our catalogues for reference purposes. Along with these shoulder heights, the fillet radius in the corners of shafts and housings is also important. Table 6 shows the values of these shoulder heights and fillet radii in the corners.

The spherical washers of thrust ball bearings are usually mounted in place, with a clearance between the washers and the housing, except for the highly accurate main shafts of machine tools. For thrust ball bearings with flat seats, in particular, perpendicularity between shafts and housing shoulders must be achieved with a high degree of accuracy, in the same way as described previously. Mounting should be done with utmost attention to eccentricity as well.

Although bearings with greater accuracy may be required for ensuring the overall accuracy of a machine, the accuracy of shafts, housings, and other related components should also be improved in conformity with bearing accuracy; inaccuracy of related components is a leading cause of bearing damage.

Furthermore, as a general precaution to ensure proper mounting, it is important to keep bearings and related components as clean as possible. This means they should be handled in an environment free from debris or high humidity, using clean rinsing oil, with due consideration for guarding against corrosion or rust. Be sure to check each part before mounting. Inspect the sealed areas as well as dimensions, shape, appearance and accuracy of shafts and housings. While checking, use care to prevent perspiration from the hands, or debris present at the site, from coming into contact with the bearings. Fitting work for bearings and clearance measurement methods have already been discussed. Ideally, plan carefully before proceeding to mounting procedures, and always maintain a well-documented record of each operation. Tapered roller bearings are mounted by setting the outer ring and inner ring subunit (inner ring, cage, and rollers)

independently of each other. The outer ring is pressed into the housing and the inner ring subunit is pressed onto the shaft. The shaft is then set into the housing to seat the tapered roller bearing assembly. During the mounting/assembly process, rotate the bearing to ensure that the large inner ring rib is in close contact with end faces of each roller (initial run-in process).

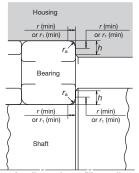


Fig. 20 Chamfer dimensions, fillet radius of shaft and housing, and shoulder height

Table 6	Recommended minimum shoulder	heights
	and fillet radius of shaft and housir	ng for
	use with metric radial bearings	Units: mn

Nominal		Shaft or Housin	g
Chamfer Dimensions			ler Heights h (min)
r (min) or r_1 (min)	Fillet Radius $r_{ m a}$ (max)	Deep Groove Ball Bearings (¹), Self-Aligning Ball Bearings, Cylindrical Roller Bearings (¹), Solid Needle	Angular Contact Ball Bearings, Tapered Roller Bearings (²), Spherical Roller Bearings
		Roller Bearings	
0.05	0.05	0.2	_
0.08	0.08	0.3	_
0.1	0.1	0.4	_
0.15	0.15	0.6	_
0.2	0.2	0.8	_
0.3	0.3	1	1.25
0.6	0.6	2	2.5
1	1	2.5	3
1.1	1	3.25	3.5
1.5	1.5	4	4.5
2	2	4.5	5
2.1	2	5.5	6
2.5	2		6
3	2.5	6.5	7
4	3	8	9
5	4	10	11
6	5	13	14
7.5	6	16	18
9.5	8	20	22
12	10	24	27
15	12	29	32
19	15	38	42

Notes

(1) When heavy axial loads are applied, the shoulder greater must be sufficiently higher than the values listed.
(2) For bearings with axial loads, the shoulder height must

be sufficiently greater than the values listed. Remarks 1. The fillet radius of the corner is also applicable to thrust bearings.

 The filled radius of the corner is also applicable to thrust bearings.
 The shoulder diameter is listed instead of shoulder height in the bearing tables. Mounting



2.5 Lubrication

The lubricating methods for rolling bearings are roughly classified into oil and grease applications. Grease lubrication is the preferred method for rolling bearings, since it allows a simpler structure for bearing seals and is convenient. This method has recently become more widely used because of improvements and development in the grease itself. Nevertheless, special attention must be paid to rotating speed, operating temperature, grease quantity, grease life, etc. Grease lubrication becomes more difficult as the rotating speed of bearings increases. The upper limit of revolution speed varies according to bearing type, dimensions,

Table 7 Brands of Lubricating Greases and Comparison of Properties

Brands	Thickeners	Base Oils	Dropping Point (°C)	Consistency	Working Temperature Range (¹) (°C)	Pressure Resistance	Usable Limit Compared to Listed Limiting Speed (²) (%)
ADLEX	Lithium	Mineral oil	198	300	0 to +110	Good	70
APPOLOIL AUTOLEX A	Lithium	Mineral oil	198	280	-10 to +110	Fair	60
ARAPEN RB 300	Lithium/Calcium	Mineral oil	177	294	-10 to + 80	Fair	70
EA2 GREASE	Urea	Poly- α -olefin oil	≥ 260	243	-40 to +150	Fair	100
EA3 GREASE	Urea	Poly-α-olefin oil	≥ 260	230	-40 to +150	Fair	100
EA5 GREASE	Urea	Poly-α-olefin oil	≥ 260	251	-40 to +160	Good	60
EA7 GREASE	Urea	Poly-α-olefin oil	≥ 260	243	-40 to +160	Fair	100
ENC GREASE	Urea	Polyol ester oil + Mineral oil	≥ 260	262	-40 to +160	Fair	70
ENS GREASE	Urea	Polyol ester oil	≥ 260	264	-40 to +160	Fair	100
ECZ GREASE	Lithium + Carbon black	Poly-α-olefin oil	≥ 260	243	-10 to +120	Fair	100
ISOFLEX NBU 15	Barium Complex	Diester oil + Mineral oil	≥ 260	280	-30 to +120	Poor	100
ISOFLEX SUPER LDS 18	Lithium	Diester oil	195	280	-50 to +110	Poor	100
ISOFLEX TOPAS NB 52	Barium Complex	Poly-α-olefin oil	≥ 260	280	-40 to +130	Poor	90
AEROSHELL GREASE 7	Micro Gel	Diester oil	≥ 260	288	-55 to +100	Poor	100
GREASE SH 33 L	Lithium	Silicone oil	210	310	-60 to +120	Poor	60
GREASE SH 44 M	Lithium	Silicone oil	210	260	-30 to +130	Poor	60
NS HI-LUBE	Lithium	Polyol ester oil + Diester oil	192	250	-40 to +130	Fair	100
NSA GREASE	Lithium	Poly-α-olefin oil + Ester oil	201	311	-40 to +130	Fair	70
NSC GREASE	Lithium	Alkyldiphenyl ether oil + Polyol ester oil	192	235	-30 to +140	Fair	70
NSK CLEAN GREASE LG2	Lithium	Poly-α-olefin oil + Mineral oil	201	199	-40 to +130	Poor	100
EMALUBE 8030	Urea	Mineral oil	≥ 260	280	0 to +130	Good	60
MA8 GREASE	Urea	Alkyldiphenyl ether oil + Poly-a-olefin oil	≥ 260	283	-30 to +160	Fair	70
KRYTOX GPL-524	PTFE	Perfluoropolyether oil	≥ 260	265	0 to +200	Fair	70
KP1 GREASE	PTFE	Perfluoropolyether oil	≥ 260	280	-30 to +200	Fair	60
COSMO WIDE GREASE WR No.3 N	Sodium Terephtalamate	Polyol ester oil + Mineral oil	≥ 230	227	-40 to +130	Poor	100
G-40M	Lithium	Silicone oil	223	252	-30 to +130	Poor	60
SHELL GADUS S2 V220 2	Lithium	Mineral oil	187	276	0 to + 80	Good	60
SHELL ALVANIA GREASE S1	Lithium	Mineral oil	182	323	-10 to +110	Fair	70
SHELL ALVANIA GREASE S2	Lithium	Mineral oil	185	275	-10 to +110	Fair	70
SHELL ALVANIA GREASE S3	Lithium	Mineral oil	185	242	-10 to +110	Fair	70
SHELL CASSIDA GREASE RLS 2	Aluminum Complex	Poly- α -olefin oil	≥ 260	280	0 to +120	Fair	70
SHELL SUNLIGHT GREASE 2	Lithium	Mineral oil	200	274	-10 to +110	Fair	70
WPH GREASE	Urea	Poly-α-olefin oil	259	240	-40 to +150	Fair	70
DEMNUM GREASE L-200	PTFE	Perfluoropolyether oil	≥ 260	280	-30 to +200	Fair	60
NIGACE WR-S	Urea	Mixed oil	≥ 260	230	-30 to +150	Poor	70
NIGLUB RSH	Sodium Complex	Polyalkylene Glycol oil	≥ 260	270	-20 to +120	Fair	60
PYRONOC UNIVERSAL N6B	Urea	Mineral oil	238	290	0 to +130	Fair	70
PALMAX RBG	Lithium Complex	Mineral oil	216	300	-10 to +130	Good	70
BEACON 325	Lithium	Diester oil	190	274	-50 to +100	Poor	100
MULTEMP PS No.2	Lithium	Poly- α -olefin oil + Diester oil	190	275	-50 to +110	Poor	100
MOLYKOTE FS-3451 GREASE	PTFE	Fluorosilicone oil	≥ 260	285	0 to +180	Fair	70
UME GREASE	Urea	Mineral oil	≥ 260	268	-10 to +130	Fair	70
UMM GREASE 2	Urea	Mineral oil	≥ 260	267	-10 to +130	Fair	70
RAREMAX AF-1	Urea	Mineral oil	≥ 260	300	-10 to +130	Fair	70

Notes (1) If grease will be used at the upper or lower limit of the temperature range or in a special environment such as vacuum, please consult with NSK.

(2) For short-term operation or when cool, grease may be used at speeds exceeding the above limits provided the supply of grease is appropriate


lubricating methods and service conditions. In the dimension table of NSK's rolling bearing catalogue, the limiting speeds are listed by bearing, assuming normal operation conditions.

The operating temperature range of grease varies depends on the type of grease used. Table 7 shows the generally recommended temperature range. When grease is used outside this temperature range, care should be used for replenishing the lubricant. Sufficient grease must be packed inside the bearing, including the cage guide face. The available space inside the housing to be packed with grease, excluding the bearing and shaft, depends on the speed, as follows:

• 1/2 to 2/3 of the space (Less than 50 % of the limiting speed) • 1/3 to 1/2 of the space (More than 50 % of the limiting speed) Since the quality and property of greases change as they are used, they must be replaced after a given period has elapsed. Serviceability limits cannot be readily determined for all applications, since changes in quality and properties are affected by operating and external conditions. Operators may also find it difficult to determine the timing of replacement based on appearance.

Assuming that the greases are used under normal operating conditions, refer to Figs. 23 and 24 on page 16 concerning replacement time intervals.

Oil lubrication is widely used. Oil features excellent flowability and heat dissipation capacity and is suitable for circulating and forced lubrication, from which debris and abrasive particles are easily removed. It also has a positive effect on vibration and acoustic properties, and therefore is the optimum choice as a lubricant. However, oil lubrication clearly adds complexity to the lubrication system and requires careful maintenance. Furthermore, bearing seals must be carefully tended to

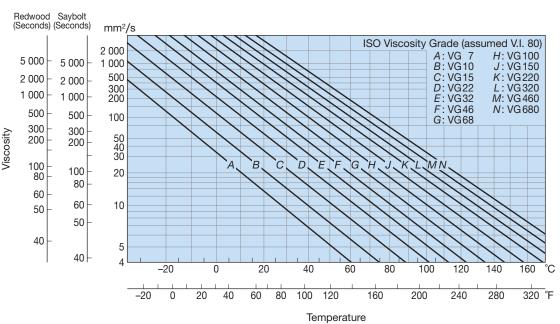

prevent oil leakage.

Selecting the proper lubrication oil involves considering its viscosity at the operating temperature of the applicable bearing. It is generally better to choose an oil having the following viscosity or higher at the respective

operating temperature for the applicable bearing types: Ball bearings and cylindrical roller bearings

····· 13 mm²/s or higher Spherical roller bearings and tapered roller bearings ····· 20 mm²/s or higher Spherical thrust roller bearings

..... 32 mm²/s or higher Fig. 22 shows the general relationship between oil viscosity and temperature, although some variations from these numbers can be found.

Lubricating methods include oil bath lubrication, splash lubrication, forced circulating lubrication, and oil mist lubrication. The selection of the proper lubricating methods depends on the structures in the vicinity of the bearings and operating conditions. The most typical limiting speeds for bearings adopting oil bath lubrication are also listed in our catalog's dimension table.

2.6 Test Operation

A test operation should be performed after mounting has been completed. Items to be checked during the test include the existence of abnormal noise and excessive rise in bearing temperature. Needless to say, bearing rotation must be smooth during test operation. If any abnormality is found during the test operation, immediately discontinue the test, dismount the bearing and conduct an inspection depending on the specific abnormality.

Especially for high-speed machines, start the operation



Fig. 22 Temperature-Viscosity chart

at lower speeds, then gradually increase speed. Although bearing temperature can generally be estimated by the temperature of the outside surface of the housing, it is better to directly measure the temperature of the outer ring using oil holes for access. Changes in temperature can also be estimated by the temperature of the lubricant. Since, in general, bearing temperature gradually rises and reaches saturation temperature over time, it is possible to confirm that mounting has been done correctly by monitoring the rise in temperature. In the event of problems with the bearing, its mounting, or both, bearing temperature may not level off but will increase to an abnormal level

The saturation temperature of a bearing varies depending on heat capacity, heat release, number of revolutions and load of the host machine. Usually the rise in temperature will range from 20 °C to 30 °C.

The probable causes of unrestrained temperature rise to abnormal levels are:

- Excessive supply of grease or oil
- · Excessive friction of the bearing seals
- Insufficient bearing clearance

- Excessive speed with respect to bearing type and lubricating method
- Abnormal load on bearing
- · Improper contact of bearing due to inaccurate shaft, housing, or shoulders
- Defective bearings, etc.

Moreover, there may be cases involving improper mounting, inaccurate fabrication, or the incorrect selection of a bearing

The sound of a bearing may be checked with a noise locator or other listening instrument placed in contact with the housing. Abnormal conditions, such as a loud metallic sounds, strange noises or other irregular sounds, may be caused by insufficient lubricant, inaccurate shaft or housing, the entry of foreign particles or debris into the bearing, or defective bearings.

For reference purposes, probable causes of various types of bearing failure and related measures are shown in Table 8.

The results of the test operation must always be recorded for reference after mounting has been completed, as a future reference for troubleshooting.

Table 8 Causes of and Measures for Operating Irregularities

Ir	regularties	Possible Causes	Measures						
		Abnormal Load	Improve the fit, internal clearance, preload, position of housing shoulder, etc.						
	Loud	Incorrect mounting	Improve the machining accuracy and alignment of shaft and hous accuracy of mounting method.						
	Metalic Sound (1)	Insufficient or improper lubricant	Replenish the lubricant or select another lubricant.						
		Contact of rotating parts	Modify the labyrinth seal, etc.						
Noise		Flaws, corrosion, or scratches on raceways	Replace or clean the bearing, improve the seals, and use clean lubricant.						
	Loud Regular Sound	Brinelling	Replace the bearing and use care when handling bearings.						
		Flaking on raceway	Replace the bearing.						
		Excessive clearance	Improve the fit, clearance and preload.						
	Irregular Sound	Penetration of foreign particles	Replace or clean the bearing, improve the seals, and use clean lubricant.						
		Flaws or flaking on balls	Replace the bearing.						
		Excessive amount of lubricant	Reduce amount of lubricant, select stiffer grease.						
		Insufficient or improper lubricant	Replenish lubricant or select a better one.						
Abnorma	al Temperature Rise	Abnormal load	Improve the fit, internal clearance, preload, position of housing shoulder.						
		Incorrect mounting	Improve the machining accuracy and alignment of shaft and housing, accuracy of mounting, or mounting method.						
		Creep on fitted surface, excessive seal friction	Correct the seals, replace the bearing, correct the fitting or mounting.						
		Brinelling	Replace the bearing and use care when handling bearings.						
	Vibration	Flaking	Replace the bearing.						
(Axial runout)		Incorrect mounting	Correct the squareness between the shaft and housing shoulder or side of spacer.						
		Penetration of foreign particles	Replace or clean the bearing, improve the seals.						
	Leakage or ration of Lubricant	Too much lubricant. Penetration by foreign matter or abrasion chips	Reduce the amount of lubricant, select a stiffer grease. Replace the bearing or lubricant. Clean the housing and adjacent parts.						

Note (1) Squeaking may be heard in medium- to large-sized cylindrical roller bearings or ball bearings that are operating under grease lubrication in low-temperature environments. Under such conditions, even when squeaking occurs, the bearing temperature will not rise and fatigue or grease life will not be affected. Consequently, such a bearing can continue to be used.



3.1 **Procedures of Maintenance** and Inspection

Consistent maintenance and regular inspections are required to ensure continued use of the bearing throughout its operating life so that problems are identified and resolved early to avert future (and potentially escalating) problems or accidents. Inspection of bearings during operation is integrated into such activities as occasionally listening to the sound of the bearings, monitoring bearing temperature, or investigating bearing vibration. Even a slight flaking of the bearing will create abnormal or irregular noise that can be readily distinguished from normal sound by a skilled worker using a noise locator. Although bearing temperature can be roughly determined by simply touching the housing surface, please insert a thermometer into a lubrication hole or similar point of entry to directly measure bearing temperature. Bearings for moving units that cannot be monitored for noise or temperature during operation, such as roller bearings for vehicles, should be periodically inspected, and fresh grease should applied.

Examining the condition of the grease during operation is also a useful method for determining the operational condition of the bearing. The operational condition can be determined by the amount of dirt and fine iron powder contained in the grease as well as any sign of leakage or deterioration of the grease.

Whenever such inspections reveal abnormality or failure of the bearing, the bearing should be disassembled for further detailed inspection to identify the cause.

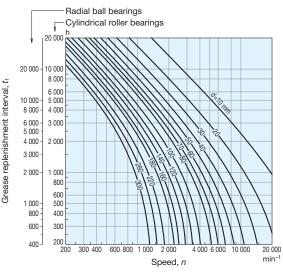


Fig. 23 Grease Replenishment Intervals for Radial Ball Bearings, Cylindrical Roller Bearings



P/C	≦0.06	0.1	0.13	0.16
Load factor	1.5	1	0.65	0.45

Maintenance and Inspection

Lubrication Method 3.2

3.2.1 Grease Lubrication


Lubricant is indispensable for bearings; however, only a small amount of lubricant is required and typically does not need to be replenished often. The interval varies depending on bearing type, dimension, number of revolutions and other operational conditions. These factors can often be determined empirically.

Figs. 23 and 24 are the guidelines of replenishment time interval for the condition of high-quality lithium soapmineral oil grease, bearing temperature of 70 °C, and normal load (P/C=0.1). If the bearing temperature exceeds 70 °C, the replenishment time interval must be reduced by half for every 15 °C temperature rise of the bearings. Also, the replenishment time interval depends on the magnitude of the bearing load, and it should be used by multiplying Load factor shown in table 9. In the case of ball bearings especially, the replenishment time interval can be extended depending on the grease

(For example, high-quality lithium soap-synthetic oil grease may extend about two times of replenishing time interval shown in Figs. 23 and 24.)

The lubrication performance of grease declines by the emulsification or the deterioration due to intrusion of foreign matter or water. Therefore, if the bearing is used in such harsh conditions, it is necessary to shorten the replenishment time interval in Figs. 23 and 24 by a half to a tenth.

A housing should be designed in consideration of the need to replenish or replace the grease. For example, a

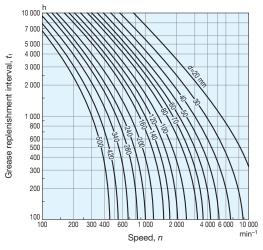



NSK 16

type used

housing used for machines requiring occasional replacement of grease should be easy to disassemble, and, since grease will be frequently replenished in situations in which the entry of water through a sealing device cannot be avoided, the housing must be designed so that the old grease can be readily discharged. Although the housing may be filled with grease when the bearing is used for extremely low-speed operation, avoid complete filling with grease in high-speed applications. When a housing can be regularly disassembled, it is better not to drill a grease supply hole. In practical terms, grease will only reach the periphery of the supply hole without reaching the bearing, and thus may actually impair performance.

However, larger bearings or bearings used for higherspeed operations require frequent, proper greasing. In this case, a grease supply hole should be drilled since it is difficult to disassemble the housing at every greasing. It is recommended to partition the housing space on the side of the supply hole into several grease sectors (Fig. 25) in order to infuse new grease into the bearing without filling up the housing. A wide housing space should be provided at the opposite side of the supply hole in order to collect old grease, which should be occasionally discharged by opening the cover.

Bearings used for high-speed operation can be greased more easily using a grease valve. This is appropriate for bearings used for long-term continuous operations, such as electric motors or turbine pumps. The grease valve is intended to obviate grease repletion. Fig. 26 illustrates the location of grease sectors and the provision of a


grease valve with a housing.

Fig. 27 shows a plummer block provided with a grease valve, where a thin iron plate b partitions grease sectors.

3.2.2 Oil Lubrication

An oil gauge, provided with a bath lubrication housing, should be read when the bearing is not in use in order to determine the oil level and lessen the chance of error occurring. In principle, if the quantity of oil is less than the proper oil level, oil should be supplied; however, if the sealing device is functioning properly with no hydraulic leakage, there is less need for lubrication replenishment. The need for oil replacement depends on operating conditions. If a bearing is used at a temperature of 50 °C or lower in a favorable environment with little dust or dirt, an oil change intervals up to one year should be sufficient.

If the bearing is used at an operating temperature exceeding 100 °C with an external heat source, the oil should be replaced every two or three months or more frequently, even if the used oil is thermally stable. In case of drop lubrication, the number of drops should be appropriately adjusted according to the specific conditions; however, several drops per minute should be sufficient under normal conditions. In case of high-speed operation, where the bearing is lubricated by oil-jet lubrication, the lubricant quantity will be adjusted by the oil pressure and the nozzle bore diameter. It is important to ensure that the supplied oil will not accumulate at the bearing section.

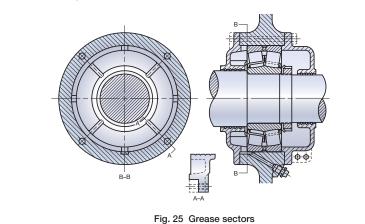

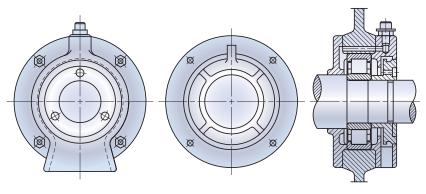


Fig. 26 Grease valve

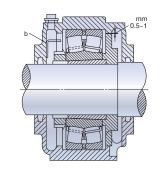


Fig. 27 Grease valve (plummer block)

Bearing Failure 3.3

Carefully observing a bearing that failed prematurely and inspecting the lubrication conditions and the mounting conditions to investigate the process leading to failure of the bearing is important to prevent recurrence. Likely causes include improper mounting, handling or lubrication; incomplete sealing structure; and insufficient consideration for thermal effect. For instance, rib scoring, one example of premature failure, may be the result of shortage of oil, faulty lubrication system, use of improper lubricant, entry of water or foreign matter, excessive relative tilt angle between the inner ring and the outer ring due to excessive mounting error or excessive deflection of the shaft, or any combination of these. Thus, it is too difficult to find the real cause by only inspecting the failed bearing itself. However, by tracing down the conditions before and after the occurrence of

Running Traces and Applied Loads

As the bearing rotates, the raceways of the inner ring and the outer ring make contact with the rolling elements. This results in a wear path on both the rolling elements and raceways. It is normal for the running trace to be marked on the raceway, and the extent and shape of this running trace provides a useful indication of loading conditions

It is possible to determine from careful observation of the running traces whether the bearing is carrying a radial load, a large axial load, or a moment load, or if there is extreme rigidity variations of the housing. Unexpected load applied on the bearing or excessive mounting error or the like can also be determined, providing a clue to the investigation of



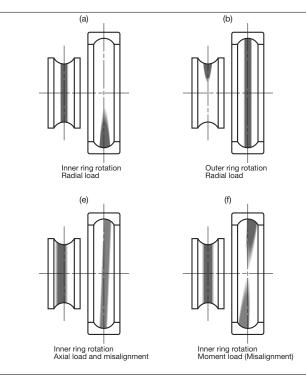


Fig. 28 Typical Running Traces of Deep Groove Ball Bearings

failure, and after checking the machine and the area which the bearing was applied, and also the operating conditions and handling/operating histories, it becomes possible to determine several probable causes. This will help prevent recurrence of bearing failure. The quickest way to identify the cause is to painstakingly note all aspects of the failed bearing, including contact corrosion or flaws on the inner diameter surface and the outer diameter surface, as well as the condition of the bearing interior, such as the running track on the raceway and the sliding area, including the rib. At the same time, studying undamaged bearings used under similar operating conditions is often useful. To sum up, comprehensive examination of the machinery using the bearing is important. Representative cases of bearing failure are provided below for your reference.

causes for bearing failure. Representative running traces of deep groove ball bearings are shown in Fig. 28. Fig. 28 (a) to (d), show general running traces under radial load or axial load. The running traces vary according to whether the load is fixed to the inner ring or the outer ring, and according to load conditions. Fig. 28 (e) shows running traces with a shaft inclined due to misalignment; (f) is a running trace under a moment load; (g) is a running trace in a housing which is elliptically shaped and has poor inner diameter accuracy; and (h) is a running trace in a bearing with insufficient internal clearance. Running traces (e) to (h) often cause bearing failure, and must be carefully observed.



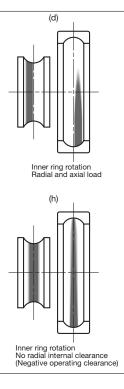



Flaking

Although flaking on a bearing appears to an extremely small extent at first, it will extend significantly in a relatively short time (Fig. 29). It cannot be easily determined whether the flaking can be attributed to bearing life, where flaking appears in the course of normal operation, or as a result of abnormal load. In addition, unlike other failures, flaking is often caused by the complicated interplay of lubrication, load and vibration factors, and thus, it is difficult to narrow down to a single cause. However, since the probability of premature cracks is extremely low where the bearing is used under proper lubrication and load, lubrication and the scale of load should be investigated as possible sources of trouble. Fig. 30 shows early-stage flaking that occurred only on one side of a spherical roller bearing as a result of an excessive axial load. In addition to such abnormal load, causes of early-stage flaking include mounting in a tilted position, improper selection of bearing clearance, and poor accuracy of housing.



Fig. 29 Flaking



Fig. 30 Flaking

Fracture and Cracks

Fig. 31 shows fracture on the large rib of the inner ring of a tapered roller bearing. This occurs when an abnormal axial load or a shock load is applied to a bearing or when an abnormal force is applied to the rib when mounting or dismounting the bearing. Causes of cracks include application of a heavy shock load (**Fig. 32**) and excessive interference. Where the bearing is supported only by the two edges of the outer ring, it may break along the axial plane and where there is slippage between the inner outer ring and the shaft or housing, a crack will occur at right angles to the direction of slippage. This phenomenon is seen in cases where the outer ring is loosely fit with the shaft and creeping occurs.

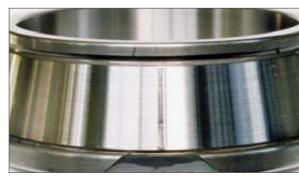


Fig. 31 Fracture



Fig. 32 Crack



Raceway dents (Brinell dents) can occur as a result of careless handling of the bearing, catching particles, or a heavy shock load applied to the bearing at rest. In addition, a dent similar to a Brinell dent may be caused by advanced abrasion in the contact area between the rolling element and the raceway resulting from vibration or oscillatory motion. This phenomenon, known as false brinelling, is often seen, especially in cases where a bearing is transported while mounted in a machine (**Fig. 33**).



Fig. 33 Denting

Scoring

Scoring occurs in a roller bearing where the roller end face (or faces) comes in contact with the rib surface of either the inner ring or outer ring (or both) as a result of small seizures, which are caused by insufficient lubrication or the entry of debris. This damage occurs on the rib surface or roller end face before any damage occurs on the rolling contact surface (Figs. 34 and 35).



Fig. 34 Scoring on the Rib of Spherical Roller Bearing



Fig. 35 Scoring on the Roller End Face



Factors influencing wear include entry of debris, insufficient lubricant and improper lubricant (Fig. 36), or where entry of water causes corrosive wear on the sliding surface or on the rolling surface.

In addition, abrasion may be caused on the fitted shaft surface by creep resulting from inappropriate fitting.



Fig. 36 Wear

Rust

Rust in the bearing interior is caused by the entry of moisture or improper lubricant. **Fig. 37** shows an example of rust caused by poor lubrication due to the entry of moisture. Reddish brown or black abrasive powder may appear on the fitted shaft surface between the shaft/housing and inner ring/outer ring. The oxide is generated by oxidation of the fitted shaft surface resulting from the slight sliding between the shaft/housing and inner ring/outer ring that occurs when contact between them is poor and is often seen in areas where vibration or heavy loads have been applied. This phenomenon, known as fretting (also called fretting corrosion), is similar to rust at first glance.



Fig. 37 Rust



Electrical Corrosion

When electric current passes through a bearing in operation, the contact area between the inner/outer ring and the ball/roller will locally melt due to electric arcing through the extremely thin oil film to form groove-like corrugations. In a conspicuous case, these grooves may appear as a pitted surface or a striped uneven surface. (Fig. 38). When the extent of the electric corrosion is significant, flaking will be induced or the hardness of the raceway surface will be impaired resulting in advanced abrasion.



Fig. 38 Electric Corrosion

Smearing)

Smearing is surface damage which occurs between the raceway surface and the rolling surface caused during operation by a collection of small seizures resulting from sliding and oil film rupture. The failure surface becomes rough as a result of the accumulation of minute adhesions as shown in **Fig. 39**. Improved lubricant and lubrication method are required.



Fig. 39 Smearing

Creep

Creep is a phenomenon in bearings where relative slipping occurs at the fitting surfaces (between the bore surface of inner ring and the shaft; and between the outside surface of outer ring and the housing), and thereby creates a clearance at the fitting. A creeping fitting surface causes a shiny or smoky surface, with the occasional appearance of scoring or wear. **Fig. 40** shows an example of this failure. Checking the interference of fitting surfaces and lateral tightening of the outer ring are effective in preventing creep. Lubrication between the bearing and the shaft/housing is effective for preventing scoring or wear.



Fig. 40 Creep



Bearings are dismounted for periodic inspection or replacement. If the removed bearing is to be reused or it is removed only for inspection, dismounting needs to be conducted as carefully as mounting, taking care not to damage the bearing or individual components. Since it is particularly difficult to dismount bearings that are tightly fitted, sufficient consideration should be given at the design stage to the structure surrounding the bearing so that the bearing can be easily dismounted. It is also important to design and manufacture dismounting tools as required.

All possible preparations must be made for dismounting bearings by studying the dismounting method, the sequence of procedures, and the fitting conditions of the bearing as displayed in drawings.

When investigating the cause of bearing failure, the bearing also needs to be treated carefully, as described above, to preserve the condition of the bearing prior to dismounting. In the course of dismounting a bearing, take care not to scratch the bearing, wipe off any grease, or remove dust, dirt or iron powder, since these actions may prevent identifying the cause of the failure. Although a loosely fitted bearing can be easily dismounted, exercise extreme care when the bearing is tightly fixed.

4.1 Dismounting Outer Rings

Fig. 41 shows an easy, effective method for dismounting a bearing with a tightly fitted outer ring. In this method, dismounting bolts are first placed into push-out holes at

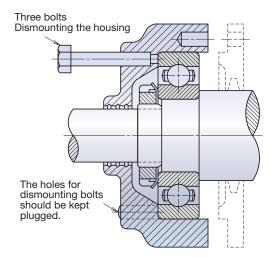


Fig. 41 Dismounting the Outer Ring

Dismounting

three points in the housing that are plugged except when dismounting the bearing.

The method shown in **Fig. 42** is recommended for housings with back and front covers fitted by through bolts. The inner ring/outer ring grooves must be protected from dents or scratches as the bearing is pulled out using a special nut that simultaneously supports both the inner and outer rings of the bearing. Depending on circumstances, the bearing may be dismounted by heating the housing; however, the circumference must be uniformly heated or the housing may be contorted or cracked. Also note that if the housing is heated for too long, the bearing may expand and become difficult to pull out.

4.2 Dismounting Inner Rings

Dismounting an inner ring is more difficult than mounting the ring when it is tightly fitted. Although a claw tool is often used to hook and then dismount an inner ring, using the same tool to pull out an outer ring may dent the raceway or spoil the bearing.

An easy method, which is often used when the inserted interference is relatively small (Fig. 43-a), involves making two or three notches on the shaft shoulder and then tapping with a hammer and patch to pull out the inner ring. However, the blow can be more safely applied using a doubled ring as shown in Fig. 43-b, since there is a risk of tapping so hard that the patch may slip and allow the small rib of the inner ring to be damaged.

Other safer methods include using a tube as an

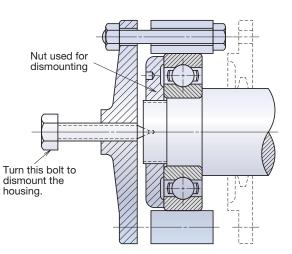


Fig. 42 Dismounting the Outer Ring



intermediary as shown in **Fig. 43-c**. Using a screw or a press is also recommended.

The tool shown in Fig. 44 is also effective for withdrawing an inner ring. Back plate A, consisting of an upper board and a lower board, is fastened with bolts. Inserting a steel ball (thrust ball bearing for a large-size bearing) between front plate B and bolt C increases reliability. Appropriate bolt holes should be drilled in A and B according to the size of the individual bearing. The force required for pulling out the inner ring can be obtained using the aforementioned equation (5) and Tables 3 and 4. The back cover of the housing may be used instead of back plate A, depending on specific conditions. Large-size roller bearings with large interference can be dismounted more easily without damaging the inner ring, in accordance with the previously described mounting/dismounting method by induction heating. When this device is not available, the inner ring may be expanded by heating the circumference with a burner or similar equipment. This method is intended to prevent damage to the shaft without regard for the possible reuse of the bearing.

The dismounting of bearings must be sufficiently considered well in advance, at the design stage, and the appropriate method must be selected and prepared for prior to implementation.

In other words, no aspect of bearing design is complete unless the processes of mounting and dismounting have been taken into account.

4.3 Bearing Cleaning

When bearings used for a given period of time are dismounted for inspection, they should be cleaned. First inspect the old grease coating the bearing, then clean the bearing and examine its condition.

Dismounted bearings should first be given a preliminary cleaning followed by a finishing rinse. During preliminary cleaning, it is better to use a brush to gently remove any grease containing dust, dirt, or abrasive powder, without rotating the bearing.

New bearings are always coated with an anti-corrosion agent prior to packaging. Generally, these bearings do not need to be cleaned only to remove the anti-corrosion agent. Since only a thin coating of anti-corrosion agent covers the surface of the bearing, there should not be any harmful effect from leaving the agent on the bearing, even when mixed with a lubricant or lubrication grease. Greater damage can be caused by cleaning the bearing in an environment exposed to contaminated oil, dust, or dirt. Nevertheless, removing the anti-corrosion agent is recommended for small bearings used in high-speed operations or for bearings that will use low-viscosity or mist lubrication.

Therefore, in principle, bearings should be cleaned when they are being examined; when dust and dirt have adhered to the bearing; or when the machine using the bearing operates at a level of speed or accuracy that would be impaired by even the slightest resistance to bearing rotation.

Kerosene is generally used as a cleaning agent. Lowviscosity spindle oil may be jet-sprayed. Compressed air is also used to remove dust and dirt from the bearing, unless the applied air contains moisture or dust/dirt; air usually contains moisture that often condenses into water droplets at the tip of the nozzle. Therefore due care must be exercised when using compressed air. In addition, since cleaning a bearing while rotating the bearing by blowing it with compressed air can damage the raceway, the inner ring/outer ring

Fig. 43 Dismounting the Inner Ring

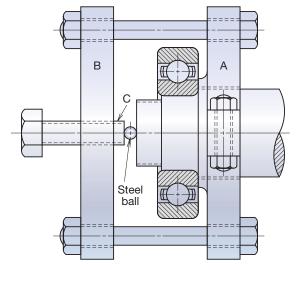


Fig. 44 Tool for Withdrawing an Inner Ring

must be fixed to prevent the bearing from rotating. When storing a cleaned bearing, it should be thoroughly dried and coated with an anti-corrosion agent. When applying grease, be sure to rotate the bearing to ensure uniform distribution to every part of the bearing.

4.4 Bearing Inspection

The term "inspection" here does not refer to the quantitative measurement of dimensional or rotational accuracy of the bearing, but simply refers to visual examination.

Specifically, in order to investigate the condition of a bearing used for a given period, carefully note the presence of any abnormality and determine whether the bearing can easily be reused, completely clean the bearing as described above, and then look for visible



Since bearings are not intended for permanent use but must be replaced at given intervals, spare bearings must be stored in warehouse environments that are similar to operational conditions so they can be replaced immediately.

When storing bearings, pay special attention to preventing rust. Although bearings are usually coated with an anti-corrosion agent and then packaged, the wrapping paper cannot completely provide protection from the circulation of ambient air. Therefore, bearings should be stored in a moisture-free location.

> Reference Catalog New Bearing Doct Instruction Manua Technical Report Instruction Manua

Dismounting

abnormalities such as rust, dents, or flaking in the raceway or the rolling element. Carefully inspect ball bearings for rotational smoothness.

In addition, also check for creep in the fitting surface of the inner ring or the outer ring as well as any signs of serious abrasion.

Also inspect the cage for wear, loose rivets or head defects. Defects most frequently occur when the rotational speed of the bearing is too high for the cage or when the lubricant is poor or insufficiently applied. Although a relatively large roller bearing can be measured for clearance with a clearance gauge, small bearings such as ball bearings cannot be measured by simply moving them by hand. An appropriate method must be applied to reliably determine the correct clearance. Refer to International Standards ISO 1132-2.

Bearing Storage

In addition, bearings should be stored in clean, wellventilated spaces with little humidity and no direct exposure to sunlight, in a locker or on a shelf, at least 30 cm above the floor. The bearings must be kept wrapped unless otherwise required, since unwrapping them can allow rust to occur.

When bearings are unwrapped for inspection prior to acceptance, they must be stored with due attention to the subsequent application of anti-corrosion agent and then re-packaged.

Gatalog	
ing Doctor	(CAT. No. 7002)
Manual for Spherical Roller Bearing	(CAT. No. 9003)
Report	(CAT. No. 728)
Manual for Roll Neck Bearing	(CAT. No. 9001)





Appendix Table 1 Tolerances for Shaft Diameters

Appe	enaix	lable	i iole	rance	s for a	Shart	Jiamei	lers																				Un	iits: µm
Diar Classi (m over	neter fication im) incl.	Single Plane Mean B.D. Deviation (Normal) \varDelta_{dmp}	d6	e6	f6	g5	g6	h5	h6	h7	h8	h9	h10	js5	js6	j5	j6	j7	k5	k6	k7	m5	m6	n6	рб	r6	r7	Diam Classificat over	
3	6	0	- 30	- 20	- 10	- 4	- 4	0	0	0	0	0	0	± 2.5	± 4	+ 3	+ 6	+ 8	+ 6	+ 9	+ 13	+ 9	+ 12	+ 16	+ 20	+ 23	+ 27	3	6
	10	- 8 0	- 38 - 40	- 28 - 25	- 18 - 13	- 9 - 5	- 12 - 5	- 5	- 8 0	- 12 0	- 18 0	- 30 0	- 48 0	± 3	± 4.5	- 2 + 4	- 2 + 7	<u> </u>	+ 1 + 7	+ 1 + 10	+ 1 + 16	+ 4 + 12	+ 4 + 15	+ 8 + 19	+ 12 + 24	+ 15 + 28	+ 15 + 34	6	10
6		- 8 0	- 49 - 50	- 34 - 32	- 22 - 16	- 11	- 14	- 6 0	- 9 0	- 15 0	- 22	- 36	- 58 0	± 3		- 2 + 5	- 2 + 8	- 5 + 12	+ 1 + 9	+ 1 + 12	+ 1 + 19	+ 6 + 15	+ 6 + 18	+ 10 + 23	+ 15 + 29	+ 19 + 34	+ 19 + 41		
10	18	- 8 0	- 61 - 65	- 43 - 40	- 27 - 20	- 14	- 17	- 8	- 11	- 18	- 27	- 43	- 70	± 4	± 5.5	- 3 + 5	- 3 + 9	- 6 + 13	+ 1 + 11	+ 1 + 15	+ 1 + 23	+ 7 + 17	+ 7 + 21	+ 12 + 28	+ 18 + 35	+ 23 + 41	+ 23 + 49	10	18
18	30	- 10	- 78	- 53	- 33	- 16	- 20	- 9 0	- 13	- 21	- 33	- 52	- 84	± 4.5	± 6.5	- 4	- 4	- 8	+ 2	+ 2	+ 2	+ 8 + 20	+ 8	+ 15	+ 22 + 42	+ 28	+ 28	18	30
30	50	0 - 12	- 80 - 96	- 50 - 66	- 25 - 41	- 9 - 20	- 9 - 25	- 11	- 16	- 25	0 - 39	0 - 62	0 –100	± 5.5	± 8	+ 6 - 5	+ 11 - 5	+ 15 - 10	+ 13 + 2	+ 18 + 2	+ 27 + 2	+ 20 + 9	+ 25 + 9	+ 33 + 17	+ 42 + 26	+ 50 + 34	+ 59 + 34	30	50
50	80	0	-100	- 60	- 30	- 10	- 10	0	0	0	0	0	0	± 6.5	± 9.5	+ 6	+ 12	+ 18	+ 15	+ 21	+ 32	+ 24	+ 30	+ 39	+ 51	+ 60 + 41	+ 71 + 41	50	65
00	00	- 15	-119	- 79	- 49	- 23	- 29	- 13	- 19	- 30	- 46	- 74	-120	1 0.0	± 0.0	- 7	- 7	- 12	+ 2	+ 2	+ 2	+ 11	+ 11	+ 20	+ 32	+ 62 + 43	+ 73 + 43	65	80
00	100	0	-120	- 72	- 36	- 12	- 12	0	0	0	0	0	0	7.5		+ 6	+ 13	+ 20	+ 18	+ 25	+ 38	+ 28	+ 35	+ 45	+ 59	+ 73 + 51	+ 86 + 51	80	100
80	120	-020	-142	- 94	- 58	- 27	- 34	- 15	- 22	- 35	- 54	- 87	-140	± 7.5	± 11	- 9	- 9	- 15	+ 3	+ 3	+ 3	+ 13	+ 13	+ 23	+ 37	+ 76 + 54	+ 89 + 54	100	120
																										+ 88 + 63	+103 + 63	120	140
120	180	0 - 25	-145 -170	- 85 -110	- 43 - 68	- 14 - 32	- 14 - 39	0	0	0 - 40	0 - 63	0 –100	0 -160	± 9	± 12.5	+ 7	+ 14 - 11	+ 22 - 18	+ 21 + 3	+ 28 + 3	+ 43 + 3	+ 33 + 15	+ 40 + 15	+ 52 + 27	+ 68 + 43	+ 90	+105	140	160
		- 25	-170	-110	- 00	- 32	- 39	- 10	- 25	- 40	- 03	-100	-100			- 11	- 11	- 10	+ 3	+ 3	+ 3	+ 15	+ 15	+ 21	+ 43	+ 65 + 93	+ 65 +108	160	180
																										+ 68 +106	+ 68 +123	180	200
180	250	0	-170	-100	- 50	- 15	- 15	0	0	0	0	0	0	± 10	± 14.5	+ 7	+ 16	+ 25	+ 24	+ 33	+ 50	+ 37	+ 46	+ 60	+ 79	+ 77 +109	+ 77 +126	200	225
100	230	- 30	-199	-129	- 79	- 35	- 44	- 20	- 29	- 46	- 72	-115	-185	1 I I I	± 14.5	- 13	- 13	- 21	+ 4	+ 4	+ 4	+ 17	+ 17	+ 31	+ 50	+ 80 +113	+ 80 +130		
																										+ 84 +126	+ 84 +146	225	250
250	315	0 - 35	-190 -222	-110 -142	- 56 - 88	- 17 - 40	- 17 - 49	0	0 - 32	0 - 52	0 - 81	0 –130	0 –210	± 11.5	± 16	+ 7 - 16	± 16	± 26	+ 27 + 4	+ 36 + 4	+ 56 + 4	+ 43 + 20	+ 52 + 20	+ 66 + 34	+ 88 + 56	+ 94 +130	+ 94 +150	250	280
					00			20	02	02	01	100	210			10				1 7	1 7	1 20	1 20		1 00	+ 98 +144	+ 98 +165	280	315
315	400	0	-210	-125	- 62	- 18	- 18	0	0	0	0	0	0	± 12.5	± 18	+ 7	± 18	+ 29	+ 29	+ 40	+ 61	+ 46	+ 57	+ 73	+ 98	+108	+108	315	355
		- 40	-246	-161	- 98	- 43	- 54	- 25	- 36	- 57	- 89	-140	-230			- 18		- 28	+ 4	+ 4	+ 4	+ 21	+ 21	+ 37	+ 62	+150 +114	+171 +114	355	400
400	500	0	-230	-135	- 68	- 20	- 20	0	0	0	0	0	0	105	. 00	+ 7	± 20	+ 31	+ 32	+ 45	+ 68	+ 50	+ 63	+ 80	+108	+166 +126	+189 +126	400	450
400	500	- 45	-270	-175	-108	- 47	- 60	- 27	- 40	- 63	- 97	-155	-250	± 13.5	± 20	- 20	± 20	- 32	+ 5	+ 5	+ 5	+ 23	+ 23	+ 40	+ 68	+172 +132	+195 +132	450	500
		0	-260	-145	- 76		- 22		0	0	0	0	0							+ 44	+ 70		+ 70	+ 88	±122	+194 +150	+220 +150	500	560
500	630	- 50	-304	-189	-120	-	- 22 - 66	-	- 44	- 70	-110	-175	-280	-	± 22	-	—	_	-	0	0	_	+ 70 + 26	+ 44	+122 + 78	+199 +155	+225 +155	560	630
		0	000	100	00		0.4		0	0	0	0	0							. 50	. 00		. 00	. 100	.100	+225	+255	630	710
630	800	0 - 75	-290 -340	-160 -210	- 80 -130	-	- 24 - 74	-	- 50	0 - 80	0 –125	0 –200	0 -320	-	± 25	-	_	-	-	+ 50 0	+ 80 0	_	+ 80 + 30	+100 + 50	+138 + 88	+175 +235	+175 +265	710	800
																										+185 +266	+185 +300	800	900
800	1 000	0 -100	-320 -376	-170 -226	- 86 -142	-	- 26 - 82	-	0 - 56	0 - 90	0 –140	0 -230	0 -360	-	± 28	-	_	-	-	+ 56 0	+ 90 0	_	+ 90 + 34	+112 + 56	+156 +100	+210 +276	+210 +310	900	
																										+220 +316	+220 +355		
1 000	1 250	0 -125	-350 -416	-195 -261	- 98 -164	_	- 28 - 94	-	0 - 66	0 –105	0 –165	0 -260	0 -420	_	± 33	_	_	_	_	+ 66	+105 0	_	+106 + 40	+132 + 66	+186 +120	+250 +326	+250 +365	1 000	
		120	10	201	104		54		00	100	100	200	720							0	0		1 40	1 00	1120	+260	+260	1 120	1 250
1 250	1 600	0	-390	-220	-110	_	- 30	_	0	0	0	0	0	_	± 39	_	_	_	_	+ 78	+125	_	+126	+156	+218	+378 +300	+425 +300	1 250	1 400
. 200		-160	-468	-298	-188		-108		- 78	-125	-195	-310	-500							0	0		+ 48	+ 78	+140	+408 +330	+455 +330	1 400	1 600
1 600	2 000	0	-430	-240	-120		- 32		0	0	0	0	0		+ 16					+ 92	+150		+150	+184	+262	+462 +370	+520 +370	1 600	1 800
1 600	2 000	-200	-522	-332	-212	_	-124	_	- 92	-150	-230	-370	-600	_	± 46	_	_	_	_	0	0	_	+ 58	+ 92	+170	+492 +400	+550 +400	1 800	2 000
					1																								

Appendices

2 000	
NSK	26

Units: um

Appe	ndix	Table 2	2 Toler	ances	s for H	ousing	g Bore	Diame	eters																	ι	Jnits: µm
Diam Classifi (mr	eter cation	Single Plane Mean B.D.																									neter ation (mm)
over	incl.	Deviation (Normal) $\varDelta_{D{ m mp}}$	E6	F6	F7	G6	G7	H6	H7	H8	J6	J7	JS6	JS7	K5	K6	К7	M5	M6	M7	N5	N6	N7	P6	P7	over	incl.
10	18	0 - 8	+ 43 + 32	+ 27 + 16	+ 34 + 16	+ 17 + 6	+ 24 + 6	+ 11 0	+ 18 0	+ 27 0	+ 6 - 5	+ 10 - 8	± 5.5	± 9	+ 2 - 6	+ 2 - 9	+ 6 - 12	- 4 - 12	- 4 - 15	0 - 18	- 9 - 17	- 9 - 20	- 5 - 23	- 15 - 26	- 11 - 29	10	18
18	30	0 - 9	+ 53 + 40	+ 33 + 20	+ 41 + 20	+ 20 + 7	+ 28 + 7	+ 13 0	+ 21 0	+ 33 0	+ 8 - 5	+ 12 - 9	± 6.5	± 10.5	+ 1 - 8	+ 2 - 11	+ 6 - 15	- 5 - 14	- 4 - 17	0 - 21	- 12 - 21	- 11 - 24	- 7 - 28	- 18 - 31	- 14 - 35	18	30
30	50	0 - 11	+ 66 + 50	+ 41 + 25	+ 50 + 25	+ 25 + 9	+ 34 + 9	+ 16	+ 25 0	+ 39 0	+ 10 - 6	+ 14 - 11	± 8	± 12.5	+ 2 - 9	+ 3 - 13	+ 7 - 18	- 5 - 16	- 4 - 20	0 - 25	- 13 - 24	- 12 - 28	- 8 - 33	- 21 - 37	- 17 - 42	30	50
50	80	0 - 13	+ 79 + 60	+ 49 + 30	+ 60 + 30	+ 29 + 10	+ 40 + 10	+ 19 0	+ 30 0	+ 46 0	+ 13 - 6	+ 18 - 12	± 9.5	± 15	+ 3 - 10	+ 4 - 15	+ 9 - 21	- 6 - 19	- 5 - 24	0 - 30	- 15 - 28	- 14 - 33	- 9 - 39	- 26 - 45	- 21 - 51	50	80
80	120	0 - 15	+ 94 + 72	+ 58 + 36	+ 71 + 36	+ 34 + 12	+ 47 + 12	+ 22	+ 35 0	+ 54 0	+ 16 - 6	+ 22 - 13	± 11	± 17.5	+ 2 - 13	+ 4 - 18	+ 10 - 25	- 8 - 23	- 6 - 28	0 - 35	- 18 - 33	- 16 - 38	- 10 - 45	- 30 - 52	- 24 - 59	80	120
120 150	150 180	0 - 18 0 - 25	+110 + 85	+ 68 + 43	+ 83 + 43	+ 39 + 14	+ 54 + 14	+ 25	+ 40	+ 63 0	+ 18 - 7	+ 26 - 14	± 12.5	± 20	+ 3 - 15	+ 4 - 21	+ 12 - 28	- 9 - 27	- 8 - 33	0 - 40	- 21 - 39	- 20 - 45	- 12 - 52	- 36 - 61	- 28 - 68	120	180
180	250	0 - 30	+129 +100	+ 79 + 50	+ 96 + 50	+ 44 + 15	+ 61 + 15	+ 29	+ 46	+ 72	+ 22 - 7	+ 30 - 16	± 14.5	± 23	+ 2 - 18	+ 5 - 24	+ 13 - 33	- 11 - 31	- 8 - 37	0 - 46	- 25 - 45	- 22 - 51	- 14 - 60	- 41 - 70	- 33 - 79	180	250
250	315	0 - 35	+142 +110	+ 88 + 56	+108 + 56	+ 49 + 17	+ 69 + 17	+ 32	+ 52 0	+ 81 0	+ 25 - 7	+ 36 - 16	± 16	± 26	+ 3 - 20	+ 5 - 27	+ 16 - 36	- 13 - 36	- 9 - 41	0 - 52	- 27 - 50	- 25 - 57	- 14 - 66	- 47 - 79	- 36 - 88	250	316
315	400	0 - 40	+161 +125	+ 98 + 62	+119 + 62	+ 54 + 18	+ 75 + 18	+ 36 0	+ 57 0	+ 89 0	+ 29 - 7	+ 39 - 18	± 18	± 28.5	+ 3 - 22	+ 7 - 29	+ 17 - 40	- 14 - 39	- 10 - 46	0 - 57	- 30 - 55	- 26 - 62	- 16 - 73	- 51 - 87	- 41 - 98	315	400
400	500	0 - 45	+175 +135	+108 + 68	+131 + 68	+ 60 + 20	+ 83 + 20	+ 40	+ 63 0	+ 97 0	+ 33 - 7	+ 43 - 20	± 20	± 31.5	+ 2 - 25	+ 8 - 32	+ 18 - 45	- 16 - 43	- 10 - 50	0 - 63	- 33 - 60	- 27 - 67	- 17 - 80	- 55 - 95	- 45 -108	400	500
500	630	0 - 50	+189 +145	+120 + 76	+146 + 76	+ 66 + 22	+ 92 + 22	+ 44	+ 70 0	+110 0	_	_	± 22	± 35	_	0 - 44	0 - 70	_	- 26 - 70	- 26 - 96	_	- 44 - 88	- 44 -114	- 78 -122	- 78 -148	500	630
630	800	0 - 75	+210 +160	+130 + 80	+160 + 80	+ 74 + 24	+104 + 24	+ 50	+ 80 0	+125 0	_	_	± 25	± 40	_	0 - 50	0 - 80	_	- 30 - 80	- 30 -110	_	- 50 -100	- 50 -130	- 88 -138	- 88 -168	630	800
800	1 000	0 -100	+226 +170	+142 + 86	+176 + 86	+ 82 + 26	+116 + 26	+ 56	+ 90 0	+140 0	_	_	± 28	± 45	_	0 - 56	0 - 90	_	- 34 - 90	- 34 -124	_	- 56 -112	- 56 -146	-100 -156	-100 -190	800	1 000
1 000	1 250	0 -125	+261 +195	+164 + 98	+203 + 98	+ 94 + 28	+133 + 28	+ 66	+105 0	+165 0	_	_	± 33	± 52.5	_	0 - 66	0 –105	_	- 40 -106	- 40 -145	_	- 66 -132	- 66 -171	-120 -186	-120 -225	1 000	1 250
1 250	1 600	0 –160	+298 +220	+188 +110	+235 +110	+108 + 30	+155 + 30	+ 78	+125 0	+195 0	_	_	± 39	± 62.5	_	0 - 78	0 -125		- 48 -126	- 48 -173	_	- 78 -156	- 78 -203	-140 -218	-140 -265	1 250	1 600
1 600	2 000	0 -200	+332 +240	+212 +120	+270 +120	+124 + 32	+182 + 32	+ 92	+150 0	+230 0	_	_	± 46	± 75	_	0 - 92	0 -150	_	- 58 -150	- 58 -208	_	- 92 -184	- 92 -242	-170 -262	-170 -320	1 600	2 000
2 000	2 500	0 -250	+370 +260	+240 +130	+305 +130	+144 + 34	+209 + 34	+110	+175 0	+280 0	_	_	± 55	± 87.5	_	0 –110	0 –175		- 68 -178	- 68 -243	_	-110 -220	-110 -285	-195 -305	-195 -370	2 000	2 500

Appendix Table 2 Tolerances for Housing Bore Diameters

Appendices

Basic Size										Standard	Grades									Basic Size	
((mm)	IT1	IT2	IT3	IT4	IT5	IT6	IT7	IT8	IT9	IT10	IT11	IT12	IT13	IT14	IT15	IT16	IT17	IT18	(n	nm)
over	incl.		1	1	1	То	lerances (µm))	1	1	1	1			Т	olerances (µ	m)	<u></u>	1	over	incl.
-	3	0.8	1.2	2	3	4	6	10	14	25	40	60	0.10	0.14	0.25	0.40	0.60	1.00	1.40	-	3
3	6	1	1.5	2.5	4	5	8	12	18	30	48	75	0.12	0.18	0.30	0.48	0.75	1.20	1.80	3	6
6	10	1	1.5	2.5	4	6	9	15	22	36	58	90	0.15	0.22	0.36	0.58	0.90	1.50	2.20	6	10
10	18	1.2	2	3	5	8	11	18	27	43	70	110	0.18	0.27	0.43	0.70	1.10	1.80	2.70	10	18
18	30	1.5	2.5	4	6	9	13	21	33	52	84	130	0.21	0.33	0.52	0.84	1.30	2.10	3.30	18	30
30	50	1.5	2.5	4	7	11	16	25	39	62	100	160	0.25	0.39	0.62	1.00	1.60	2.50	3.90	30	50
50	80	2	3	5	8	13	19	30	46	74	120	190	0.30	0.46	0.74	1.20	1.90	3.00	4.60	50	80
80	120	2.5	4	6	10	15	22	35	54	87	140	220	0.35	0.54	0.87	1.40	2.20	3.50	5.40	80	120
120	180	3.5	5	8	12	18	25	40	63	100	160	250	0.40	0.63	1.00	1.60	2.50	4.00	6.30	120	180
180	250	4.5	7	10	14	20	29	46	72	115	185	290	0.46	0.72	1.15	1.85	2.90	4.60	7.20	180	250
250	315	6	8	12	16	23	32	52	81	130	210	320	0.52	0.81	1.30	2.10	3.20	5.20	8.10	250	315
315	400	7	9	13	18	25	36	57	89	140	230	360	0.57	0.89	1.40	2.30	3.60	5.70	8.90	315	400
400	500	8	10	15	20	27	40	63	97	155	250	400	0.63	0.97	1.55	2.50	4.00	6.30	9.70	400	500
500	630	9	11	16	22	32	44	70	110	175	280	440	0.70	1.10	1.75	2.80	4.40	7.00	11.00	500	630
630	800	10	13	18	25	36	50	80	125	200	320	500	0.80	1.25	2.00	3.20	5.00	8.00	12.50	630	800
800	1 000	11	15	21	28	40	56	90	140	230	360	560	0.90	1.40	2.30	3.60	5.60	9.00	14.00	800	1 000
1 000	1 250	13	18	24	33	47	66	105	165	260	420	660	1.05	1.65	2.60	4.20	6.60	10.50	16.50	1 000	1 250
1 250	1 600	15	21	29	39	55	78	125	195	310	500	780	1.25	1.95	3.10	5.00	7.80	12.50	19.50	1 250	1 600
1 600	2 000	18	25	35	46	65	92	150	230	370	600	920	1.50	2.30	3.70	6.00	9.20	15.00	23.00	1 600	2 000
2 000	2 500	22	30	41	55	78	110	175	280	440	700	1 100	1.75	2.80	4.40	7.00	11.00	17.50	28.00	2 000	2 500
2 500	3 150	26	36	50	68	96	135	210	330	540	860	1 350	2.10	3.30	5.40	8.60	13.50	21.00	33.00	2 500	3 150

Remarks 1. Standard tolerance grades IT 14 to IT 18 must not be used for basic sizes less than or equal to 1 mm.2. Values for standard tolerance grades IT 1 to IT 5 for basic sizes over 500 mm are included for experimental use.

NSK | 30

NSK LTD.-HEADQUARTERS, TOKYO, JAPAN www.nsk.com Nissei Bldg, 1-6-3 Obsaki, Shinagawa-ku, Tokyo 141-8560, Japan INDUSTRIAL MACHINERY BUSINESS DIVISION-HEADQUARTERS P: 03-3779-7227 E: 03-3779-7644 C: 81 GLOBAL AFTERMARKET DEPARTMENT F: 03-3779-7644 P: 03-3779-7253 C: 81 PRECISION MACHINERY DEPARTMENT F: 03-3779-7644 P: 03-3779-7163 C: 81 MECHATRONICS BUSINESS DEPARTMENT F· 0466-21-3206 C: 81 P: 0466-21-3027 AUTOMOTIVE BUSINESS DIVISION-HEADQUARTERS P: 03-3779-7189 F: 03-3779-7917 C: 81 Africa NSK SOUTH AFRICA (PTY) LTD. JOHANNESBURG 25 Galaxy Avenue, Linbro Business Park, Sandton, Gauteng, P.O. Box 1157, Kelvin, 2054, South Africa P: 011-458-3600 F: 011-458-3608 C: 27 •Asia and Oceania NSK AUSTRALIA PTY. LTD. www.au.nsk.com
 A PTT. LTD.
 www.au.rsx.com

 11 Dalmore Drive, Scoresby, Victoria 3179, Australia

 P: 03-9765-4400
 F: 03-9764-8304
 C: 61
 MELBOURN
 24-28 River Road West, Parramatta, New South Wales 2150, Australia

 P: 02-8843-8100
 F: 02-9893-8406
 C: 61
 SYDNEY
 P: 02-8843-8100
 F: 02-9893-8400
 C: 01

 1/69 Selhurst Street, Coopers Plains, Queensland 4108, Australia
 P: 07-3347-2600
 F: 07-3345-5376
 C: 61
 BRISBANE Unit 1, 71 Tacoma Circuit, Canning Vale, Western Australia 6155, Australia P: 08-9256-5000 F: 08-9256-1044 C: 61 PERTH China: NSK HONG KONG LTD. HONG KONG
 Suite 814, World Commerce Centre, Harbour City, T.S.T, KLN, Hong Kong, China

 P: 02739-9933
 F: 02739-9323
 C: 852
 F: 02739-9323 P: 02/39-9933 F: 02/39-9323 C: 852 Room 624-626, 6/F, Kerry Center, Renminnan Road, Shenzhen, Guangdong, China SHENZHEN P: 0755-25904886 F: 0755-25904883 C: 86 KUNSHAN NSK CO., LTD. 258 South Huang Pu Jiang Rd., Kunshan Economic & Technical Development OFFICE/PLANT Zone, Jiangsu, China (215335) P: 0512-5771-5654 F: 0512-5771-5689 C: 86 CHANGSHU NSK NEEDLE BEARING CO., LTD. OFFICE/PLANT No. 66 Dongnan Road, Changshu Southeast Economic Development Zone, Changshu City, Jiangsu, China (215500) P: 0512-5230-1111 F: 0512-5230-6011 C: 86 NSK STEERING SYSTEMS DONGGUAN CO., LTD. OFFICE/PLANT High-tech Park, Shilong Road, Guanlong Section, Dongguan, Guangdong, China (523119) P: 0769-2262-0960 F: 0769-2316-2867 C: 86 ZHANGJIAGANG NSK PRECISION MACHINERY CO., LTD. No. 34 Zhenxing Hoau, Zhengyo Jiangsu, China (215600) 20242 5867-6496 F: 0512-5818-0970 C: 86 OFFICE/PLANT No. 34 Zhenxing Road, Zhangjiagang Economic Development Zone, Zhangjiagang City, SUZHOU NSK BEARINGS CO., LTD.
 SUZHOU NSK BEAKINGS CO., LID.

 OFFICE/PLANT
 No. 22 Taishan Road, Suzhou New District, Jiangsu, China (215129)

 P: 0512-6665-5666
 F: 0512-6665-9138
 C: 86
 NSK (CHINA) RESEARCH & DEVELOPMENT CO., LTD. JIANGSU No.8 NSK Rd., Huaqiao Economic Development Zone, Kunshan, Jiangsu, China (215332) P: 0512-5796-3000 F: 0512-5796-3300 C: 86 NSK (SHANGHAI) TRADING CO., LTD. No.8 NSK Rd., Huaqiao Economic Development Zone, Kunshan, Jiangsu, China (215332) P: 0512-5796-3000 F: 0512-5796-3300 C: 86 HEAD OFFICE NSK (CHINA) INVESTMENT CO., LTD. www.cn.nsk.com No.8 NSK Rd., Huaqiao Economic Development Zone, Kunshan, Jiangsu, China (215332) P: 0512-5796-3000 F: 0512-5796-3300 C: 86 BEIJING Room 2116, Beijing Fortune Bldg., 5 Dong San Huan Bei Lu, Chao Yang District, Beijing, China (100004) P: 010-6590-8161 F: 010-6590-8166 C: 86 Room 06, 09F The Exchange Tower 2, No. 189 NanJing Road, Heping District, TIAN JIN Tianjin, China (300050) P: 022-8319-5030 F: 022-8319-5033 C: 86 CHANGCHUN Room 1001, Building A, Zhongyin Building, 727 Xi'an Road, Changchun, Jilin, China (130061) P: 0431-8898-8682 F: 0431-8898-8670 C: 86 SHENYANG Room 1101, China Resources Building, No. 286 Qingnian Street,
 Heping District, Shenyang Liaoning, China (110004)

 P: 024-2334-2868
 F: 024-2334-2058
 C: 86
 Room 1805 Xiwang Tower, No.136 Zhongshan Road, DALIAN Zhongshan District, Dalian, Liaoning, China (116001) P: 0411-8800-8168 F: 0411-8800-8160 C: 86 A1 22F, Golden Eagle International Plaza, No.89 Hanzhong Road, Nanjing, NANJING Jiangsu, China (210029) P:025-8472-6671 F:025-8472-6687 Room 2302, TaiKoo Hui Tower 1, No.385 Tianhe Road, Tianhe District, Guangzhou, China (510620) **GUANGZHOU** P: 020-3817-7800 F: 020-3786-4501 C: 86 CHANGSHA Room 1048, 10/F, Zhongtian Plaza, No.766 WuyiRoad, Changsha, Hunan, China (410005) P 0731-8571-3100 F 0731-8571-3255 C 86 Room 1108, Fangda Hotel, 6 XiYuan Road, LuoYang HeNan, China (471003) LUOYANG P: 0379-6069-6188 F: 0379-6069-6180 C: 86 Room 1007, B Changan Metropolis Center88 Nanguanzheng Steet, Xi'an, Shanxi, XI'AN China (710068) P: 029-8765-1896 F: 029-8765-1895 C: 86 CHONGOING Room 2306, Unit B, No.137, Keyuan 2nd Road, Jiulongpo District, Chonqing, China (400039) P:023-6806-5310 F:023-6806-5292 C:86

	P.023-0600-5310	F.023-0600-5292	0.00			
CHENGDU	Room1117, Lippo Tower,	No.62 North Kehua Road,	Chengdu,	Sichuan,	China (610041
	P: 028-8528-3680	E: 028-8528-3690	C: 86			

 HEAD OFFICE
 No.8 NSK Rd., Huaqiao Economic Development Zone, Kunshan, Jiangsu, China (215332)

 P: 0512-5796-3000
 F: 0512-5796-3300
 C: R6
 NSK CHINA SALES CO., LTD.
 NSK-WARNER (SHANGHAI) CO., LTD.
 OFFICE/PLANT
 No. 2518 Huancheng Road (West) Fengxian District, Shanghai,China (201401)

 P: 021-3365-5757
 F: 021-3365-5262
 C: 86
 AKS PRECISION BALL (HANGZHOU) CO., LTD. PLANT No. 189 Hongda Road, Xiaoshan Area of Economic & Technological Development Zone, Hangzhou, Zhejiang, China (311231) F: 0571-2280-1268 C: 86 0571-2280-1288 NSK-YAGI PRECISION FORGING (ZHANGJIAGANG) CO., LTD. No. 34 Zhenxing Road, Zhangjiagang Economic Development Zone, Zhangjiagang City, No. 34 Ziterizaria (215600) Jiangsu, China (215600) F:0512-5818-0970 C:86 NSK-WANDA ELECTRIC POWER ASSISTED STEERING SYSTEMS CO.,LTD. OFFICE/PLANT 1833 Yatai Road, Wenyan Town, Xiaoshan, Hangzhou, Zhejiang, China (311258) P:0571-8231-4818 F:0571-8248-6656 C:86 SHENYANG NSK PRECISION CO., LTD. No. 7 of 15 Street, Shenyang Economic & Technological Development Area, Shenyang, Liaoning, China (110141) OFFICE/PLANT P: 024-2550-5017 F: 024-2532-6081 C: 86 SHENYANG NSK CO., LTD. OFFICE/PLANT No. 5, 15 Street, Shenyang Economic & Technological Development Area,
 Shenyang, Liaoning, China (110141)

 P: 024-2532-6080
 F: 024-2532-6081
 C: 86
 RANE NSK STEERING SYSTEMS LTD. 14, Rajagopalan Salai, Vallancherry, Guduvancherry, Tamil Nadu-603 202, India P:044-474-06017 F:044-274-66001 C:91 BAWAL Plot No.28A, Sector 6, HSIIDC Growth Centre Bawal, District Rewari, Haryana -123 501. India E:01284-264280 C:91 D-01284-264281 NSK INDIA SALES CO.PVT.LTD. 6th Floor, Bannari Amman Towers, No.29 Dr. Radhakrishnan Road, Mylapore, Chennai- 600 004 Tamil Nadu, India P:044-2847-9600 F:044-2847-9601 C:91 107, Park Centra, Sector C. Haryana-122 001, India 1404-530 F:0124-4104-532 Pood Kolka' GURGAON 107, Park Centra, Sector-30, Opposite 32nd Milestone, NH-8, Gurgaon, C:91
 P:0124-4104-530
 F:0124-4104-502
 O.51

 502, Trinity Towers, 83, Topsia Road, Kolkata-700 046, India
 P:033-4001-2064
 C:91
 KOLKATA MUMBA 321, A Wing, Ahura Centre, 82, Mahakali Caves Road, Andheri East, Mumbai -400 093. India P:022-2838-7787 F:022-2838-5191 C:91 NSK-ABC BEARINGS LTD. Plot No.A2, SIPCOT Growth Centre, Oragadam, Mathur Village, Sriperumbudur Taluk, Kancheepuram District, Tamil Nadu-602 105, India OFFICE/PLANT C:91 P:044-2714-3000 F:044-2714-3099 Indonesia PT. NSK BEARINGS MANUFACTURING INDONESIA JAKARTA PLANT Blok M4, Kawasan Berikat MM2100 Industrial Town Cikarang Barat, Bekasi 17520 Indonesia P: 021-898-0155 F: 021-898-0156 C: 62 PT. NSK INDONESIA www.id.nsk.com JAKARTA Summitmas II, 6th Floor, JI. Jend Sudirman Kav. 61-62, Jakarta 12190, Indonesia P: 021-252-3458 F: 021-252-3223 C: 62 PT. NSK-WARNER INDONESIA MM2100 Industrial Town, Cikarang Barat, Bekasi 17520, Indonesia P: 021-8998-3216 F: 021-8998-3218 C: 62 BEKAS NSK KOREA CO., LTD. www.kr.nsk.com Posco Center (West Wing) 9F, 892, Daechi-4Dong, Kangnam-Ku, Seoul, 135-777, Korea P: 02-3287-0300 F: 02-3287-0345 C: 82 SEOUL 60, Seongsan-Dong, Changwon, Kyungsangnam-Do, 642-315, Korea P: 055-287-6001 F: 055-285-9982 C: 82 CHANGWON PI ANT Malaysia NSK BEARINGS (MALAYSIA) SDN. BHD. www.my.nsk.com No. 2, Jalan Pemaju, U1/15, Seksyen U1, Hicom Glenmarie Industrial Park, 40150 Shah Alam, Selangor, Malaysia HEAD OFFICE C: 60 P: 03-7803-8859 F: 03-7806-5982 No.36, Jalan kikik, Taman Inderawasih, 13600 Prai, Penang, Malaysia PRA P: 04-3902275 F: 04-3991830 C: 60 88 Jalan Ros Merah 2/17, Taman Johor Jaya, 81100 Johor Bahru, Johor, Malaysia JOHOR BAHRU P: 07-3546290 F: 07-3546291 C: 60 Gr. Floor, 89 Jalan Bendahara, 31650 Ipoh, Perak, Malaysia IPOH P: 05-2555000 F: 05-2553373 C: 60 NSK MICRO PRECISION (M) SDN. BHD. www.my.nsk.com MALAYSIA PLANT No.43 Jalan Taming Dua, Taman Taming Jaya 43300 Balakong, Selangor Darul Ehsan, Malaysia P: 03-8961-3960 F: 03-8961-3968 C: 60 New Zealand: NSK NEW ZEALAND LTD. www.nz.nsk.com AUCKLAND 3 Te Apunga Place, Mt. Wellington, Auckland, New Zealand P: 09-276-4992 F: 09-276-4082 C: 64 Philippines: NSK REPRESENTATIVE OFFICE MANILA 8th Floor The Salcedo Towers 169 H.V. dela Costa St., Salcedo Village Makati City. Philippines 1227 P: 02-893-9543 F: 02-893-9173 C: 63 Singanore NSK INTERNATIONAL (SINGAPORE) PTE LTD. 238A, Thomson Road, #24-01/05, Novena Square Tower A, Singapore 307684 P: 6496-8000 F: 6250-5845 C: 65 SINGAPORE

P: Phone F: Fax C: Country Code Printed in Japar

 NSK SINGAPORE
 (PRIVATE) LTD.
 www.nsk-singapore.com.sg

 SINGAPORE
 238A, Thomson Road, #24-01/05, Novena Square Tower A, Singapore 307684

 P: 6496-8000
 F: 6250-5845
 C: 65

Worldwide Sales Offices and Manufacturing Plants

		amanaotan
Taiwan:		
TAIWAN NSK P	RECISION CO., LTD.	
TAIPEI	11F., No.87, Song Jiang Rd., Jhongshan District, P: 02-2509-3305 F: 02-2509-1393	Taipei City 104, Taiwan R.O.C. C: 886
TAICHUNG	107-7, Sec. 3, Wen Xing Rd., Taichung City 407,	
	P: 04-2311-7978 F: 04-2311-2627	C: 886
TAINAN	No.8 Daye 1st Rd., Southern Taiwan Science Park, P: 06-505-5861 F: 06-505-5061	C: 886
	ECHNOLOGY CO., LTD.	
TAIPEI	11F., No. 87, Songjiang Rd., Jhongshan District, P: 02-2509-3305 F: 02-2509-1393	Taipei City 104, Taiwan R.O.C. C: 886
TAICHUNG	10F-3, No.123, Sec.3, Junggang Rd., Taichung 4	
	P: 04-2358-2945 F: 04-2358-7682	C: 886
TAINAN	5F. No.8, Daye 1st Rd., Southern Taiwan Science Taiwan B.O.C.	e Park, Tainan County 741,
	P: 06-505-5861 F: 06-505-5061	C: 886
Thailand:		
BANGKOK	6 (THAILAND) CO.,LTD. 26 Soi On-Nuch 55/1 Pravet District, Bangkok 10	250. Thailand
	P: 02320-2555 F: 02320-2826	C: 66
NSK BEARINGS OFFICE/PLANT	5 MANUFACTURING (THAILAND) CO., 1 700/430 Moo 7, Amata Nakorn Industrial Estate,	
	Chonburi 20000, Thailand	1.Donndalor, A.Mdangenonburi,
	P: 038-454-010 F: 038-454-017	C: 66
OFFICE/PLANT	ERING SYSTEMS CO., LTD. 90 Moo 9, Wellgrow Industrial Estate, Km.36 Ban	ona-Trad Rd., Bangwao,
	Bangpakong, Chachoengsao 24180, Thailand	
	P: 038-522-343 F: 038-522-351	C: 66
CHONBURI	FIC TECHNOLOGY CENTRE (THAILAN 700/430 Moo 7, Amata Nakorn Industrial Estate,	
	Chonburi 20000, Thailand	
Vietnam:	P: 038-454-631 F: 038-454-634	C: 66
NSK VIETNAM	CO., LTD.	
HEAD OFFICE	Techno Center, Room 204-205, Thang Long Indu	istrial Park, Dong Anh District,
	Hanoi, Vietnam P: 04-3955-0159 F: 04-3955-0158	C: 84
	NTATIVE OFFICE	
HO CHI MINH CITY	Suite 307, Metropolitan Building, 235 Dong Khoi P: 08-3822-7907 F: 08-3822-7910	Street, District 1,HCMC, Vietnam C: 84
	F. 00-3022-7907 F. 00-3022-7910	0. 64
•Europe	/	
MAIDENHEAD	TD. (EUROPEAN HEADQUARTERS) Belmont Place, Belmont Road, Maidenhead, Berl	www.eu.nsk.com kshire SL6 6TB, U.K.
	P: 01628-509-800 F: 01628-509-808	C: 44
France: NSK FRANCE S	A S	
PARIS	Quartier de l'Europe, 2 Rue Georges Guynemer,	78283 Guyancourt, France
	P: 01-30-57-39-39 F: 01-30-57-00-01	C: 33
Germany: NSK DEUTSCH	LAND GMBH	
HEAD OFFICE	Harkortstrasse 15, D-40880 Ratingen, Germany	
STUTTGART	P: 02102-4810 F: 02102-4812-290 Liebknechtstrasse 33. D-70565 Stuttgart-Vaihing	C: 49 en Germany
ororraam	P: 0711-79082-0 F: 0711-79082-289	C: 49
WOLFSBURG	Heinrich-Nordhoff-Strasse 101, D-38440 Wolfsbu	
NEUWEG FERT	P: 05361-27647-10 F: 05361-27647-70	C: 49
OFFICE/PLANT	Ehinger Strasse 5, D-89597 Munderkingen, Germ	
Italy:	P: 07393-540 F: 07393-5414	C: 49
NSK ITALIA S.P	.A.	
	Via Garibaldi 215, Garbagnate Milanese (Milano)	
Netherlands:	P: 0299-5191 F: 0299-025778	C: 39
	N DISTRIBUTION CENTRE B.V.	
	De Kroonstraat 38, 5048 AP Tilburg, Netherlands P: 013-4647647 F: 013-4647648	C: 31
Poland:		0.01
	TD. REPRESENTATIVE OFFICE	
WARSAW	Ul. Migdalowa 4/73, 02-796, Warsaw, Poland P: 022-645-1525 F: 022-645-1529	C: 48
NSK BEARINGS		
OFFICE/PLANT	Ul. Jagiellonska 109, 25-734 Kielce, Poland P: 041-366-5001 F: 041-367-0500	C: 48
NSK STEERING	SYSTEMS EUROPE (POLSKA) SP.ZO.	
CORPORATE	Ul. Mariana Jachimowicza 17, 58-306 Walbrzych	, Poland
OFFICE/PLANT	P: 074-664-4101 F: 074-664-4104 EARING POLAND SP.ZO.O.	C: 48
OFFICE/PLANT	UL. Jagiellonska 109, 25-734 Kielce, Poland	
	P: 041-345-2469 F: 041-345-0361	C: 48
NSK POLSKA S KIELCE	UI. Karczowkowska 41, 25-711 Kielce, Poland	
	P: 041-347-5110 F: 041-347-5101	C: 48
Spain: NSK SPAIN S.A.		
BARCELONA	C/Tarragona 161, 2a Planta, 08014, Barcelona, S	
Turker	P: 093-433-5775 F: 093-433-5776	C: 34
Turkey: NSK RULMANL	ARI ORTA DOGU TIC. LTD. STI.	
ISTANBUL	19 Mayis Mah. Ataturk Cad. Ulya Engin Is Merkez	zi No. 68 Kat. 6, Kozyatagi
	34734, Istanbul, Turkey P: 0216-355-0398 F: 0216-355-0399	C: 90
		-

NSK Ltd. has a basic policy not to export any products or technology designated as controlled items by export-related laws. When exporting the products in this brochure, the laws of the exporting country must be observed. Specifications are subject to change without notice and without any obligation on the part of the manufacturer. Every care has been taken to ensure the accuracy of the data contained in this brochure, but no liability can be accepted for any loss or damage suffered through errors or omissions. We will gratefully acknowledge any additions or corrections.

United Kingdom: NSK BEARINGS EUROPE LTD.

NSK BEARINGS PETERLEE	BUROPE LTD. 3 Brindley Road, South West Industrial Estate, Peterlee, Co. Durham SR8 2JD, U.K.
PLANT	P: 0191-586-6111 F: 0191-586-3482 C: 44
NEWARK	Northern Road, Newark, Nottinghamshire NG24 2JF, U.K.
PLANT	P: 01636-605-123 F: 01636-605-000 C: 44
NEWARK	N TECHNOLOGY CENTRE Northern Road, Newark, Nottinghamshire NG24 2JF, U.K.
	P: 01636-605-123 F: 01636-643-241 C: 44
NSK UK LTD.	
NEWARK	Northern Road, Newark, Nottinghamshire NG24 2JF, U.K. P: 01636-605-123 F: 01636-605-000 C: 44
	d South America
NSK AMERICAS ANN ARBOR	5, INC. (AMERICAN HEADQUARTERS) 4200 Goss Road, Ann Arbor, Michigan 48105, U.S.A.
ANN ARBOR	P: 734-913-7500 F: 734-913-7511 C: 1
Argentina:	
NSK ARGENTIN	
BUENOS AIRES	Garcia del Rio 2477 Piso 7 Oficina "A" (1429) Buenos Aires-Argentina P: 11-4704-5100 F: 11-4704-0033 C: 54
Brazil:	
NSK BRASIL LT	DA. www.br.nsk.com
HEAD OFFICE	Rua 13 de Maio, 1633-14th Andar-Bela Vista-CEP 01327-905 São Paulo, SP, Brazil
SUZANO PLANT	P: 011-3269-4786 F: 011-3269-4720 C: 55 Av. Vereador Joao Batista Fitipaldi, 66, CEP 08685-000, Vila Maluf, Suzano, SP, Brazil
SOZANO I LANI	P: 011-4744-2527 F: 011-4744-2529 C: 55
BELO HORIZONTE	Rua Ceara 1431-4th andar-sala 405-Funcionarios Belo Horizonte-MG, Brazil
	30150-311
JOINVILLE	P: 031-3274-2591 F: 031-3273-4408 C: 55 Rua Blumenau, 178-sala 910-Centro Joinville-SC, Brazil 89204-250
JOINVILLE	P: 047-3422-5445 F: 047-3422-2817 C: 55
PORTO ALEGRE	Av. Cristovão Colombo, 1694-sala 202-Floresta Porto Alegre-RS, Brazil 90560 001
	P: 051-3222-1324 F: 051-3222-2599 C: 55
RECIFE	Av. Conselheiro Aguiar, 2738-6th andar-conj. 604-Boa Viagem Recife-PE, Brazil 51020-020 P: 081-3326-3781 F: 081-3326-5047 C: 55
Peru:	P: 081-3326-3781 F: 081-3326-5047 C: 55
NSK PERU S.A.	С.
LIMA	Av. Caminos del Inca 670, Ofic : # 402, Santiago del Surco, Lima, Perú
Canada	P: 01-652-3372 F: 01-638-0555 C: 51
Canada: NSK CANADA I	NC. www.ca.nsk.com
HEAD OFFICE	5585 McAdam Road, Mississauga, Ontario, Canada L4Z 1N4
	P: 905-890-0740 F: 800-800-2788 C: 1
TORONTO	5585 McAdam Road, Mississauga, Ontario, Canada L4Z 1N4 P: 877-994-6675 F: 800-800-2788 C: 1
MONTREAL	2150-32E Avenue Lachine, Quebec, Canada H8T 3H7
	P: 514-633-1220 F: 800-800-2788 C: 1
VANCOUVER	3353 Wayburne Drive, Burnaby, British Columbia, Canada V5G 4L4
Mexico:	P: 877-994-6675 F: 800-800-2788 C: 1
	NTOS MEXICANA, S.A. DE C.V. www.mx.nsk.com
MEXICO CITY	Av. Presidente Juarez No.2007 Lote 5, Col. San Jeronimo Tepetlacalco,
	Tlalnepantla, Estado de Mexico, Mexico, C.P.54090 P: 55-3682-2900 F: 55-3682-2937 C: 52
MONTERREY	Av. Ricardo Margain 575, IOS Torre C, Suite 516, Parque Corporativo Santa
	Engracia, San Pedro Garza Garcia, N.L. Mexico, C.P.66267
	P: 81-8000-7300 F: 81-8000-7095 C: 52
United States o	f America: TION www.us.nsk.com
HEAD OFFICE	4200 Goss Road, Ann Arbor, Michigan 48105, U.S.A.
	P: 734-913-7500 F: 734-913-7511 C: 1
	4200 Goss Road, Ann Arbor, Michigan 48105, U.S.A.
TECHNOLOGY CENTER	P: 734-913-7500 F: 734-913-7511 C: 1 1100 N. First Street, Clarinda, Iowa 51632, U.S.A.
	P: 712-542-5121 F: 712-542-4905 C: 1
FRANKLIN PLANT	3400 Bearing Drive, Franklin, Indiana 46131, U.S.A.
	P: 317-738-5000 F: 317-738-5064 C: 1
LIBERTY PLANT	1112 East Kitchel Road, Liberty, Indiana 47353, U.S.A. P: 765-458-5000 F: 765-458-7832 C: 1
NSK PRECISIO	N AMERICA, INC. www.npa.nsk.com
OFFICE/PLANT	3450 Bearing Drive, Franklin, Indiana 46131, U.S.A.
	P: 317-738-5000 F: 317-738-5050 C: 1
SAN JOSE	780 Montague Expressway, Suite 508, San Jose, California 95131, U.S.A. P: 408-944-9400 F: 408-944-9405 C: 1
NSK STEERING	SYSTEMS AMERICA, INC. www.nssa.nsk.com
OFFICE/PLANT	110 Shields Drive, Bennington, Vermont 05201, U.S.A.
	P: 802-442-5448 F: 802-442-2253 C: 1
DYERSBURG PLANT	2962 Fort Hudson Road, Dyersburg, TN 38024, U.S.A. P: 731-288-3000 F: 731-288-3001 C: 1
ANN ARBOR	4200 Goss Road, Ann Arbor, Michigan 48105, U.S.A.
	P: 734-913-7500 F: 734-913-7102 C: 1
NSK-WARNER	
TROY	3001 West Big Beaver Road, Suite 701, Troy, Michigan 48084, U.S.A. P: 248-822-8888 F: 248-822-1111 C: 1
NSK LATIN AM	
MIAMI	2500 NW 107th Avenue, Suite 300, Miami, Florida 33172, U.S.A.
	P: 305-477-0605 F: 305-477-0377 C: 1

<As of January 2012> For the latest information, please refer to the NSK website.





NSK used environmentally friendly printing methods for this publication.